

Instructions

Wire Coffee Table Glass Top VP17 Verner Panton 2026



Please read these instructions carefully and retain them for future reference to ensure the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damage caused by not following these instructions correctly. Do not modify this product in any way. If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com

&Tradition®

Wire Coffee Table

Glass Top VP17

Verner Panton

2026

A



B



C



D



E



Safety precautions

- Be careful when handling glass. The glass is tempered and will not break if handled carefully
- Be sure not to scratch surfaces during assembly of the product

Contents

- A Glass top
- B Centre screw extra long
- C Allen Key
- D Plastic spacers x 5
- E Centre spacer

Cleaning instructions


- For daily care, it is recommended to dust the surface with a soft, dry cloth. Regular cleaning can be done using a soft cloth wrung in a mild solution of lukewarm water and a standard glass cleaning detergent. Dry immediately with another soft, dry cloth to avoid streaks or watermarks. Avoid abrasive cleaning agents as they can damage the surface of the glass

**Please follow steps 1-4
to assemble the product.**

Step 1 / 4


Place the 5 plastic spacers (D) on the second outermost wire, above the larger wire. Positions are indicated on the drawing.

The spacers click on without use of tools.

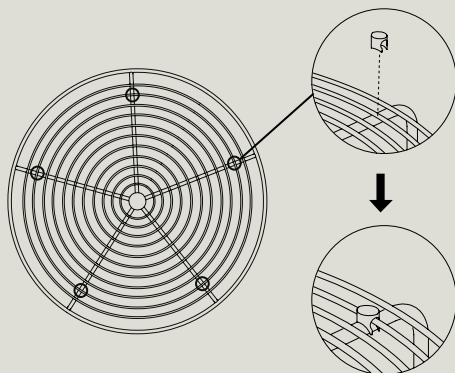


Step 2 / 4

On the wire table, use the Allen Key to unscrew the centre plate from the bottom. This will make the top washer come loose. The screw will only be used if you decide to remove the glass top again. Store the screw for future use.

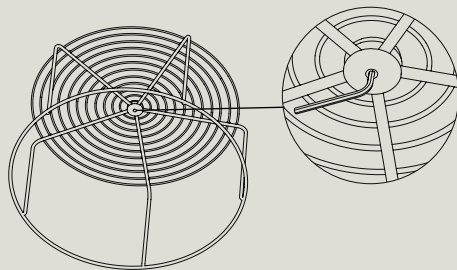

Step 3 / 4

Place the centre washer on top of the centre of the table

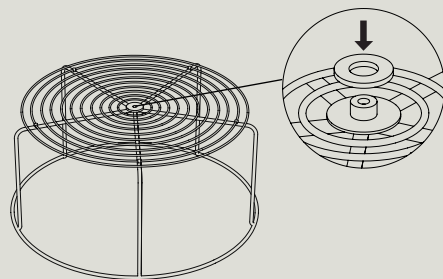

Step 4 / 4

Place the glass top on top of the table, resting on the spacers. Then put the centre washer back in place on top of the glass top. Insert the longer screw from underneath and tighten it with the Allen Key.

