


- INSTRUCTION MANUAL -

PACK CHAIR

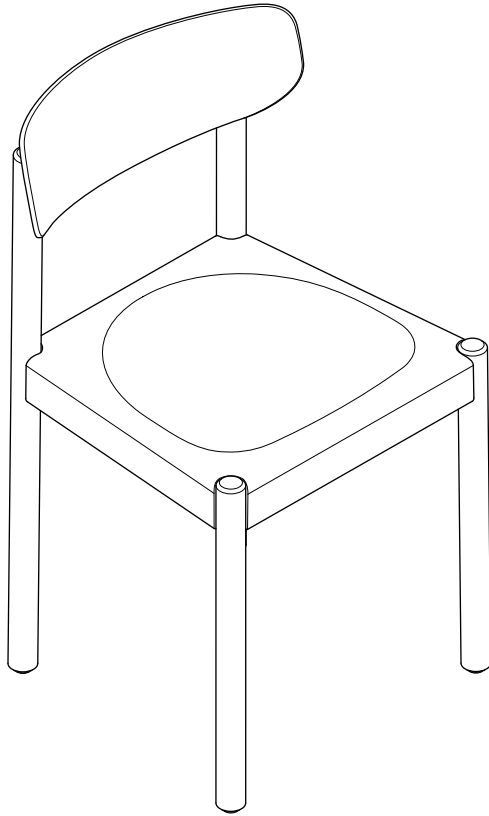


DESIGN BY JASPER MORRISON

HAY

PACK CHAIR

Design by Jasper Morrison

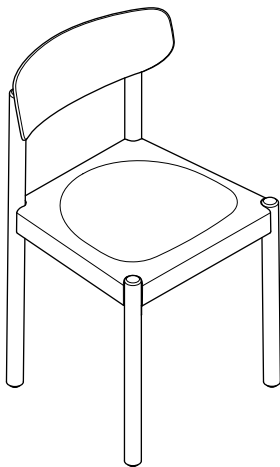


Do not place the seat cover in a washing machine.
Machine washing may damage the cover.
Clean by hand or dry clean only.

Instruction Manual





Follow the illustrated guide on the opposite side of this page along with this written guide.

- 1** Place the seat on the floor, on the cardboard or other protective material to prevent scratches.

PARTS

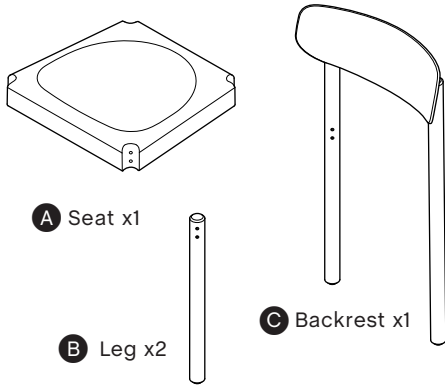

MOUNTING BAG

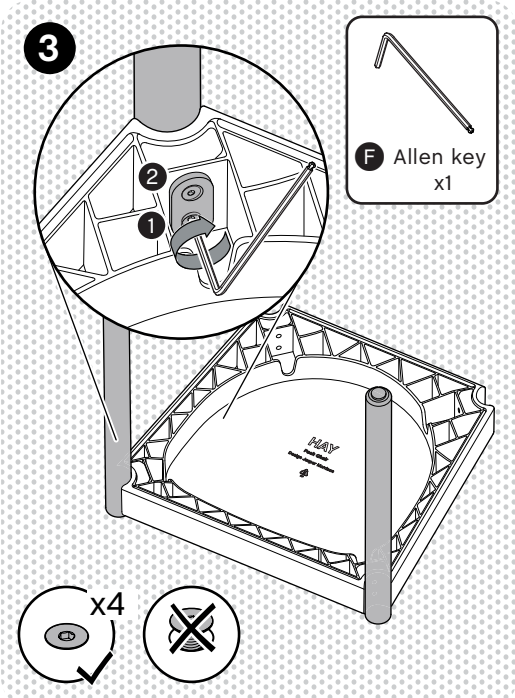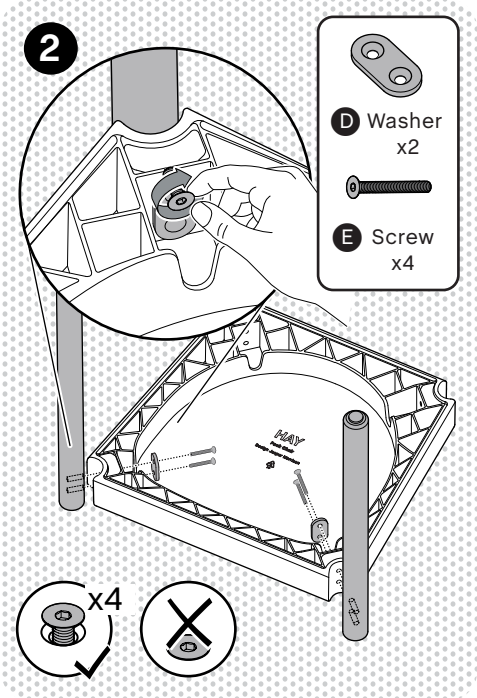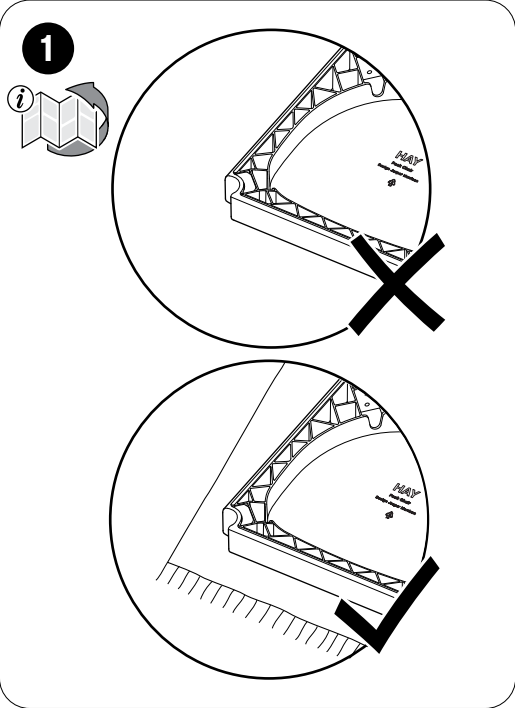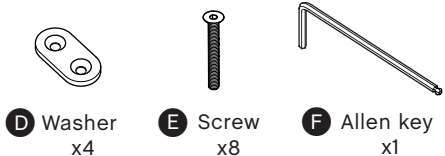

- 2** Insert the front leg into the corner recess of the seat. Note the mounting direction! Insert the washer and the screws. Tighten them lightly by hand.
- 3** Tighten the screw closest to the seat first, followed by the second one. Repeat the process for the second front leg.
- 4** Place the seat with the front legs attached onto the backrest with legs. Insert the washers and screws into both legs and tighten loosely by hand. Lastly, tighten them using an Allen key.
- 5** Turn the chair over. Done!
- 6** If the chair is wobbly on a flat surface, identify the leg causing the wobble. Press down on the seat with one hand. With the other hand, loosen and then retighten the screws until the chair is stable.
- 7** The screws may need to be retightened over time.

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your furniture.







Please find our Care & Maintenance guide by scanning the QR code above.



You can find more relevant information on Pack Chair by scanning the QR code.

You can also find the same information at hay.dk/downloads

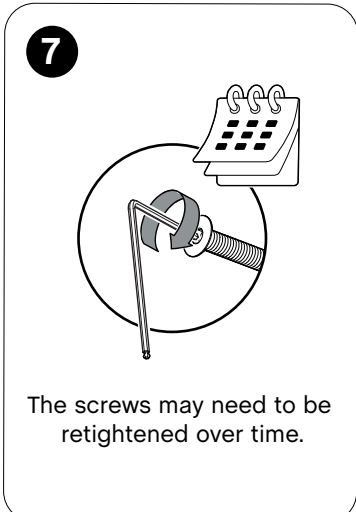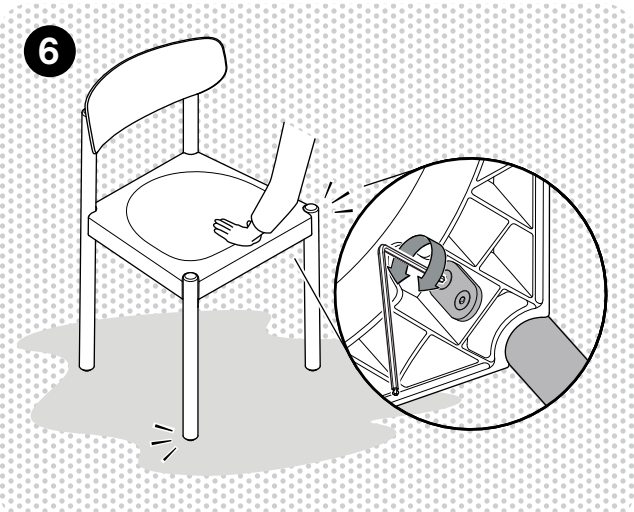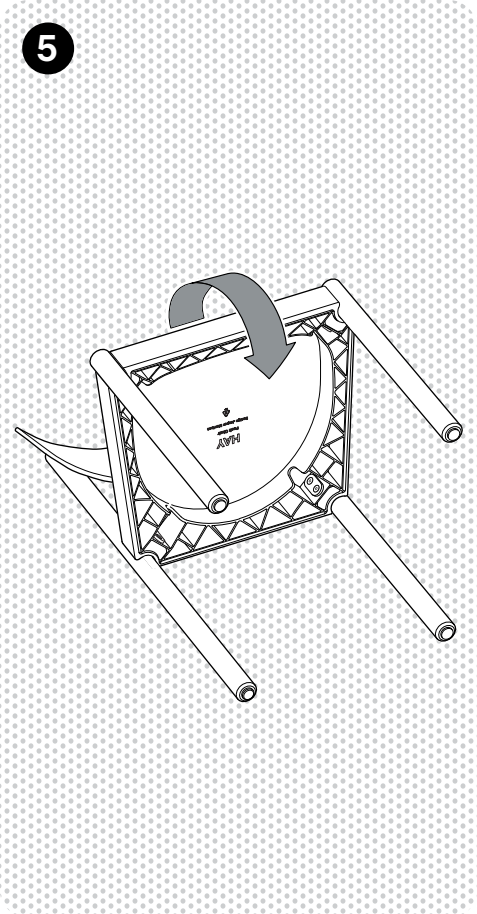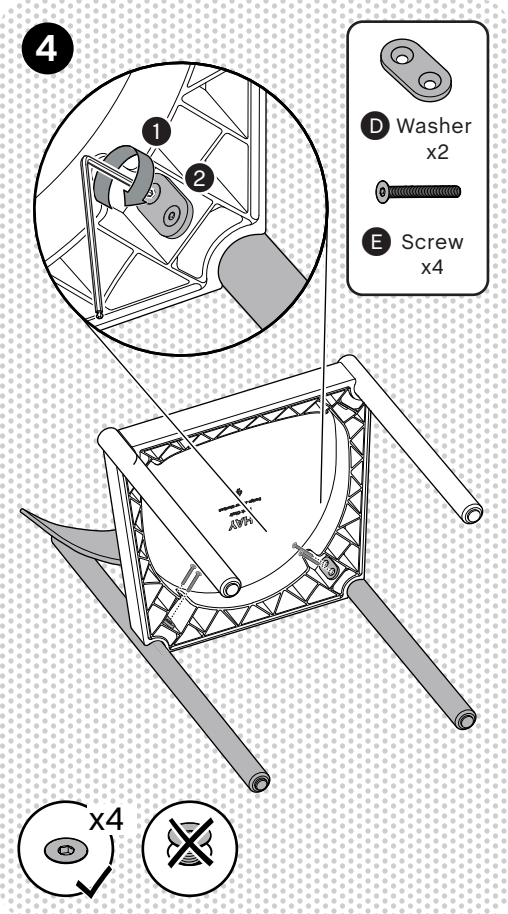

Havnen 3 8700 Horsens Denmark
+45 3164 6000 / hay@hay.com

18/03/2026

HAY

