


- INSTRUCTION MANUAL -

# CHISEL TABLE



MODEL 630

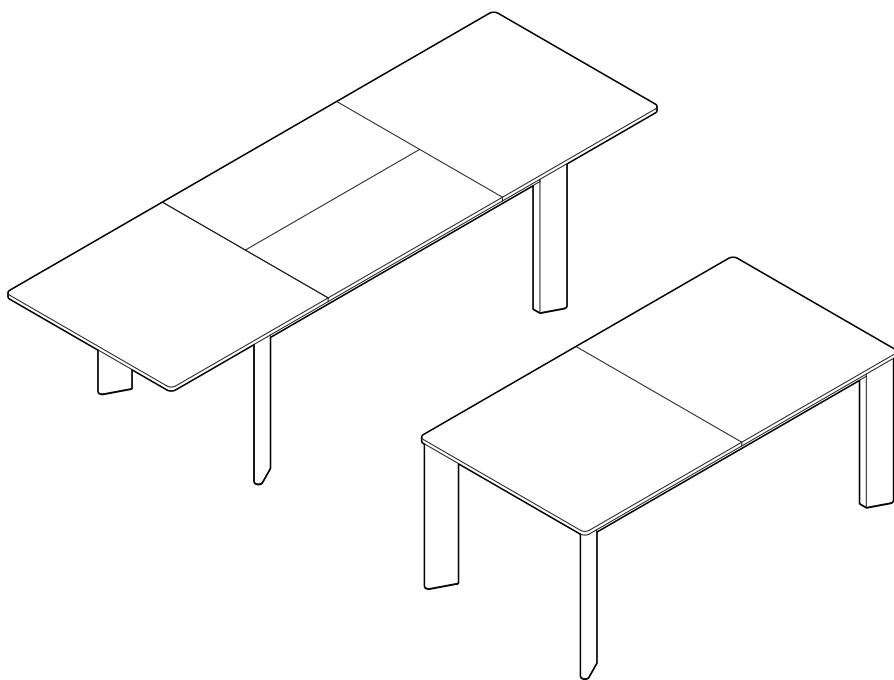


DESIGN BY ANDREAS BERGSAKER

# HAY

- PARTS -

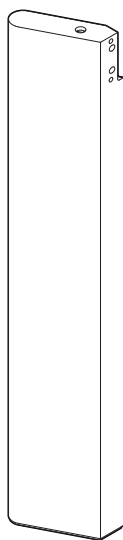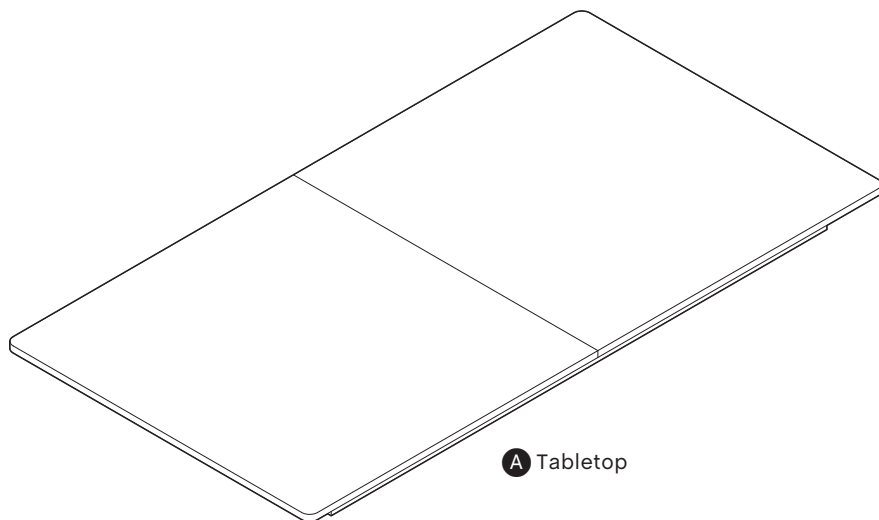

**MOUNTING BAG**


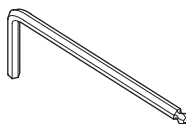




Two people are needed to assemble the table.


1.

Keep the tabletop **A** on the cardboard box,  
and fold the sides for easier assembly.  
This will prevent the table from scratches.

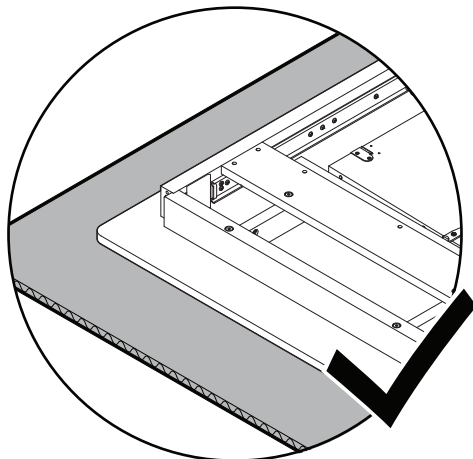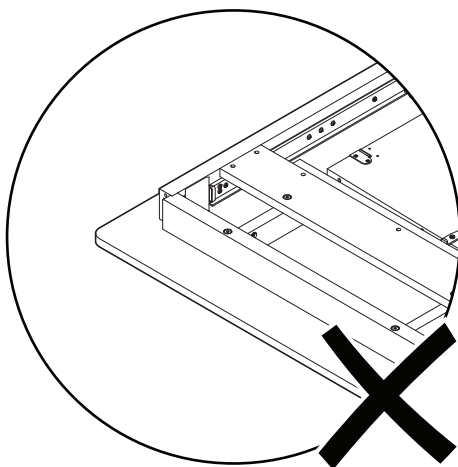


2.

Push out the pre-assembled screws to create space for assembling the legs, then fit the legs onto the wooden dowels on the tabletop.

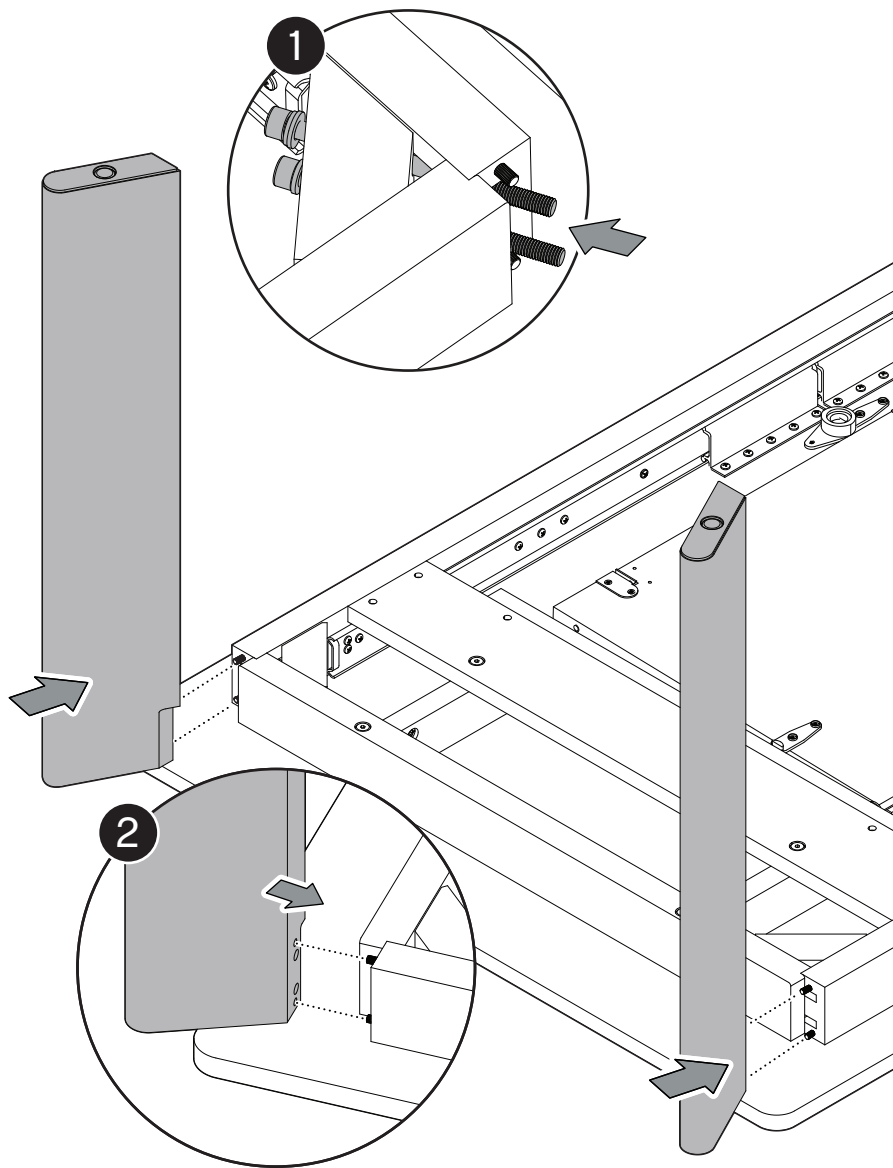

3.


Attach the legs **B** loosely to the apron using two screws **D** with a washer **E** and spring washer **F** on each screw. Fully tighten the screws once both have been mounted, starting with the screw closest to the tabletop.

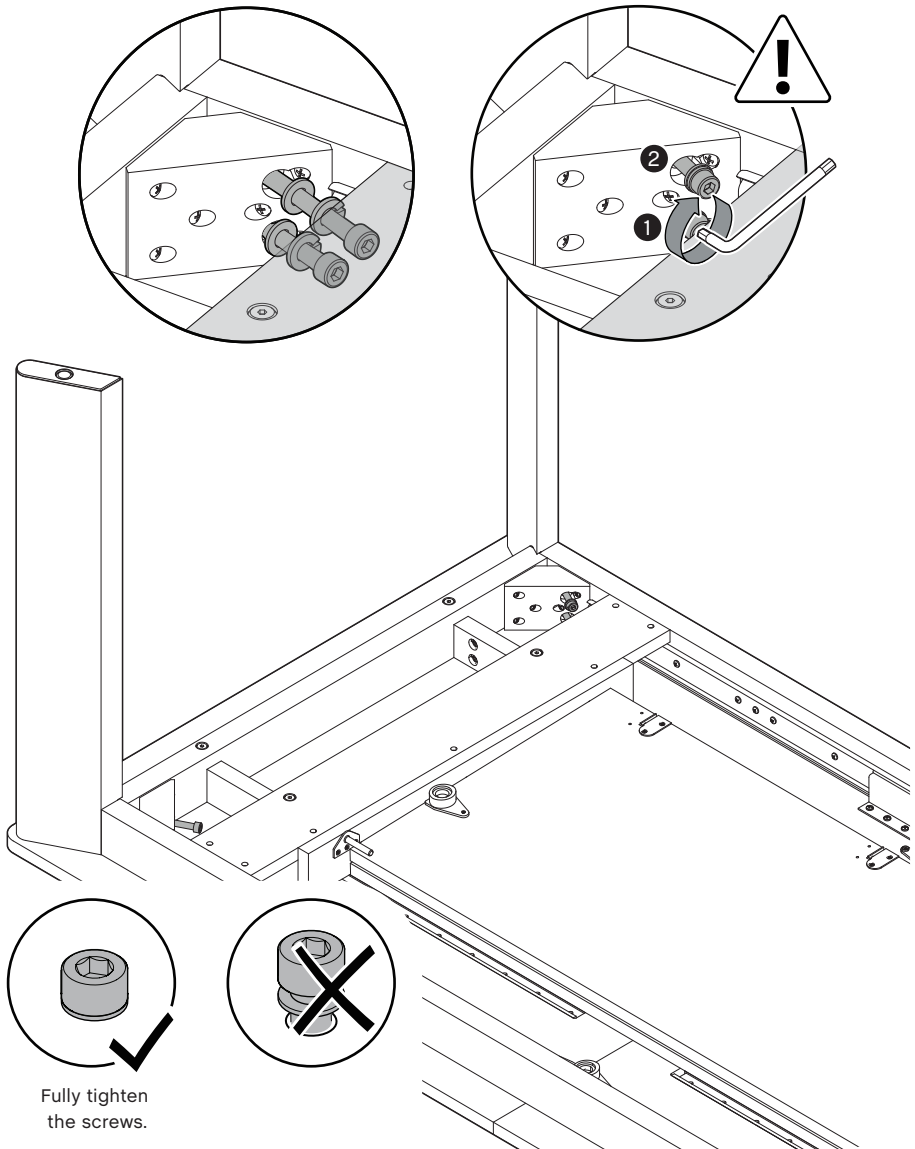




4.

Flip the table over by the frame, ensuring it is lifted safely to prevent damage.  
Done!

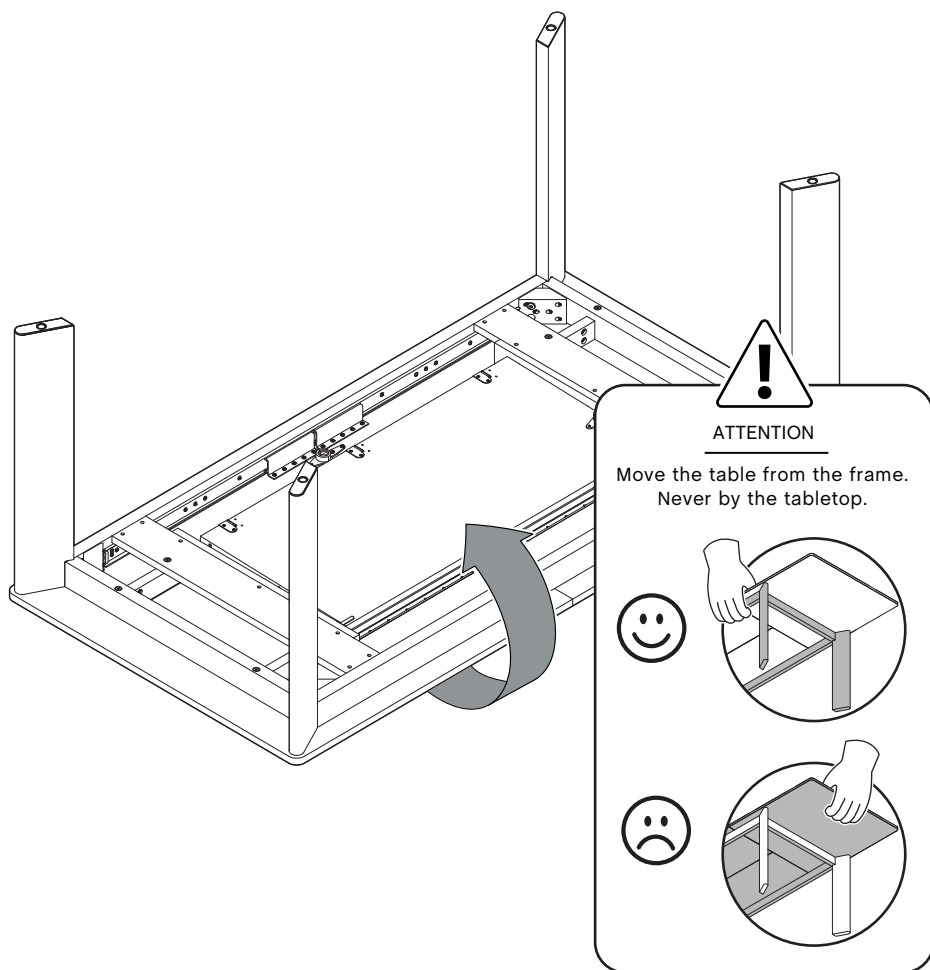


5.

If the floor is uneven, use the adjustable glides to level the table.

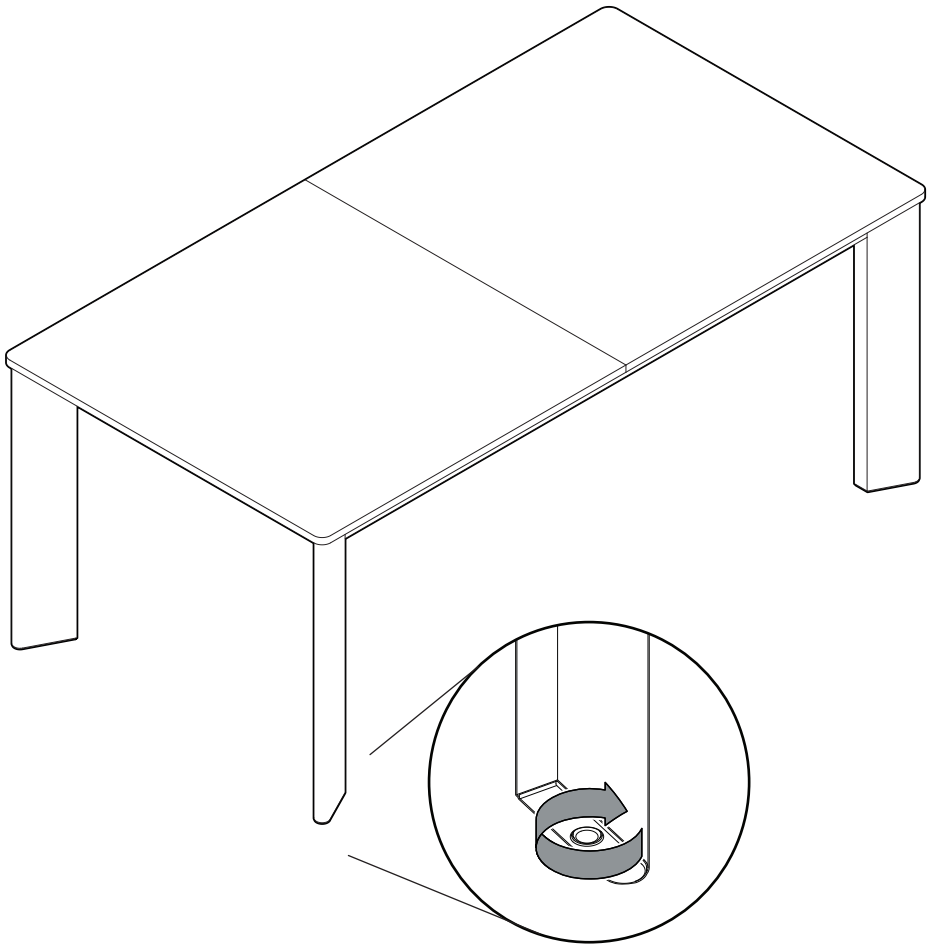

# EXTENDING TABLE LEAVES

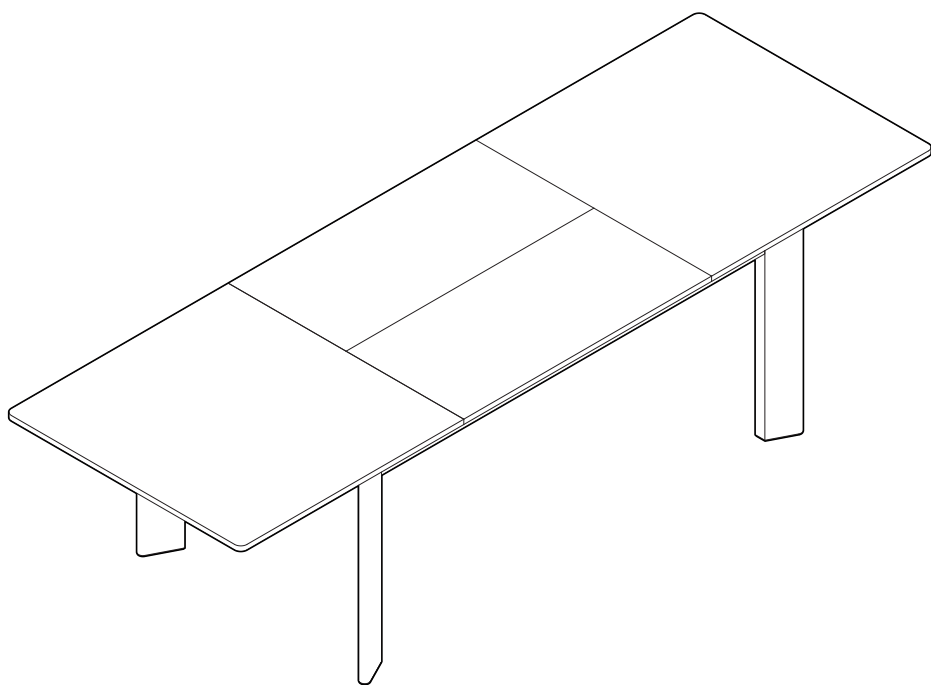


7.

To extend the table, open the two locks under each side of the table.  
Open the first lock until you hear a click to ensure it is fully open.




**DO NOT FORGET**

Open the two locks on  
both sides.

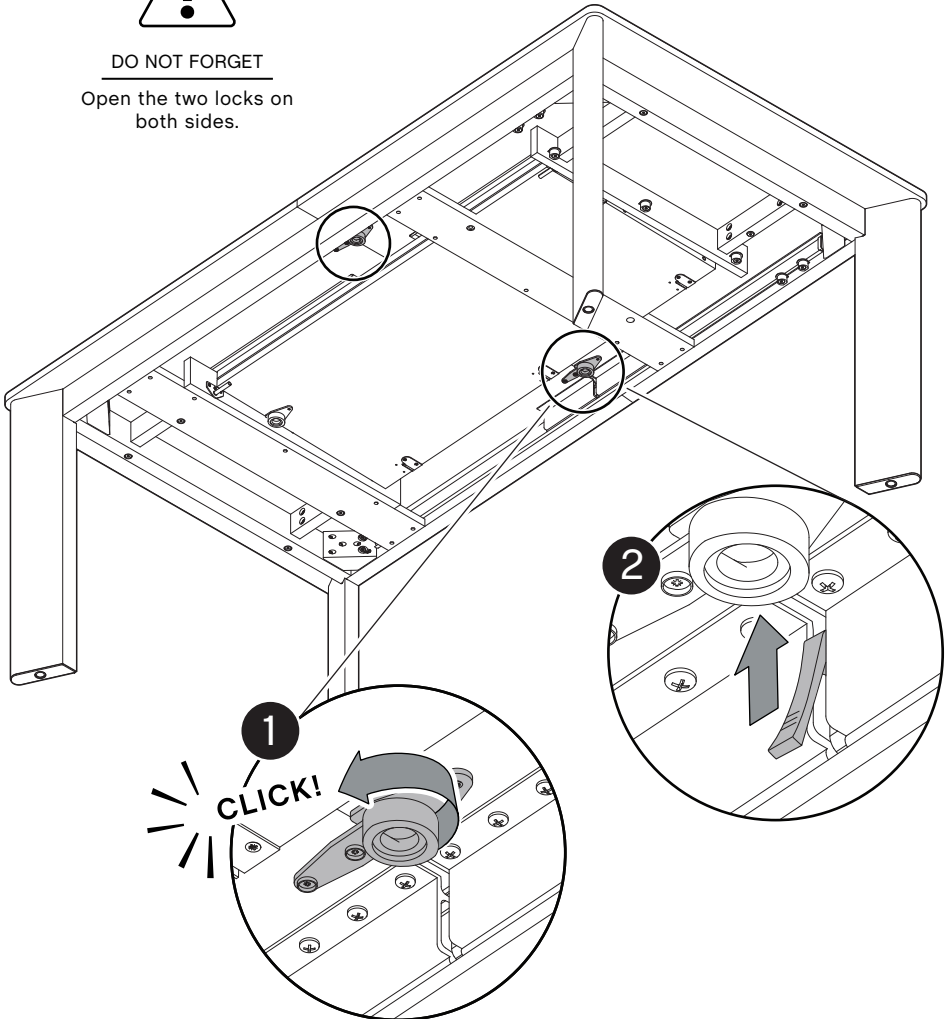


8.

With the locks open, slide the two tabletops apart as far as possible.

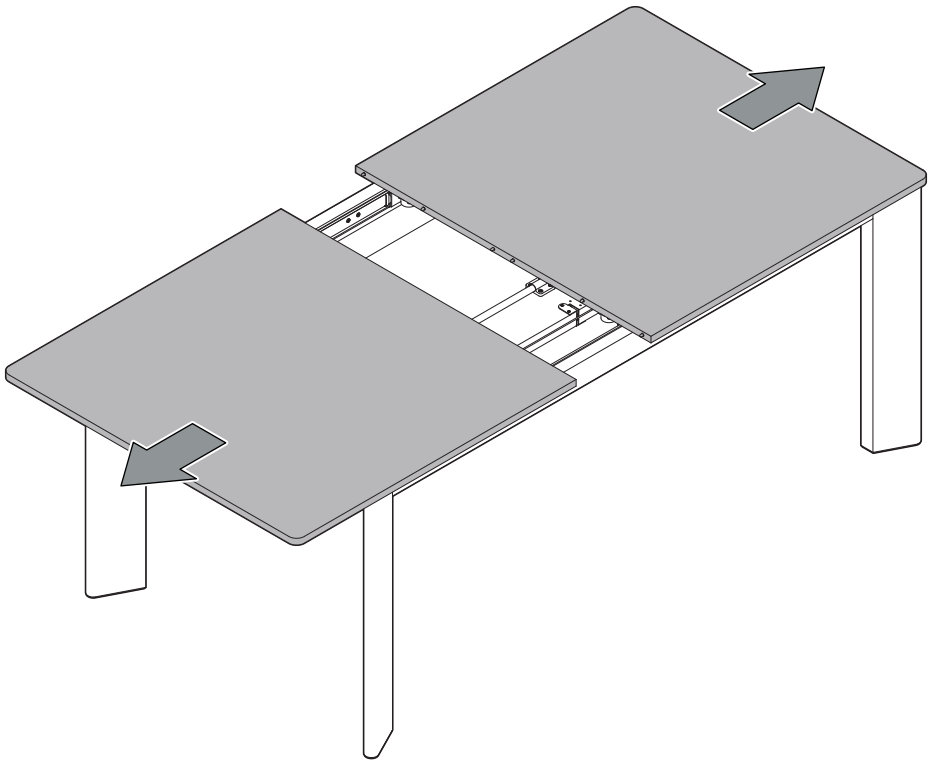


9.

Flip open the two leaves and slide the tabletops into place.

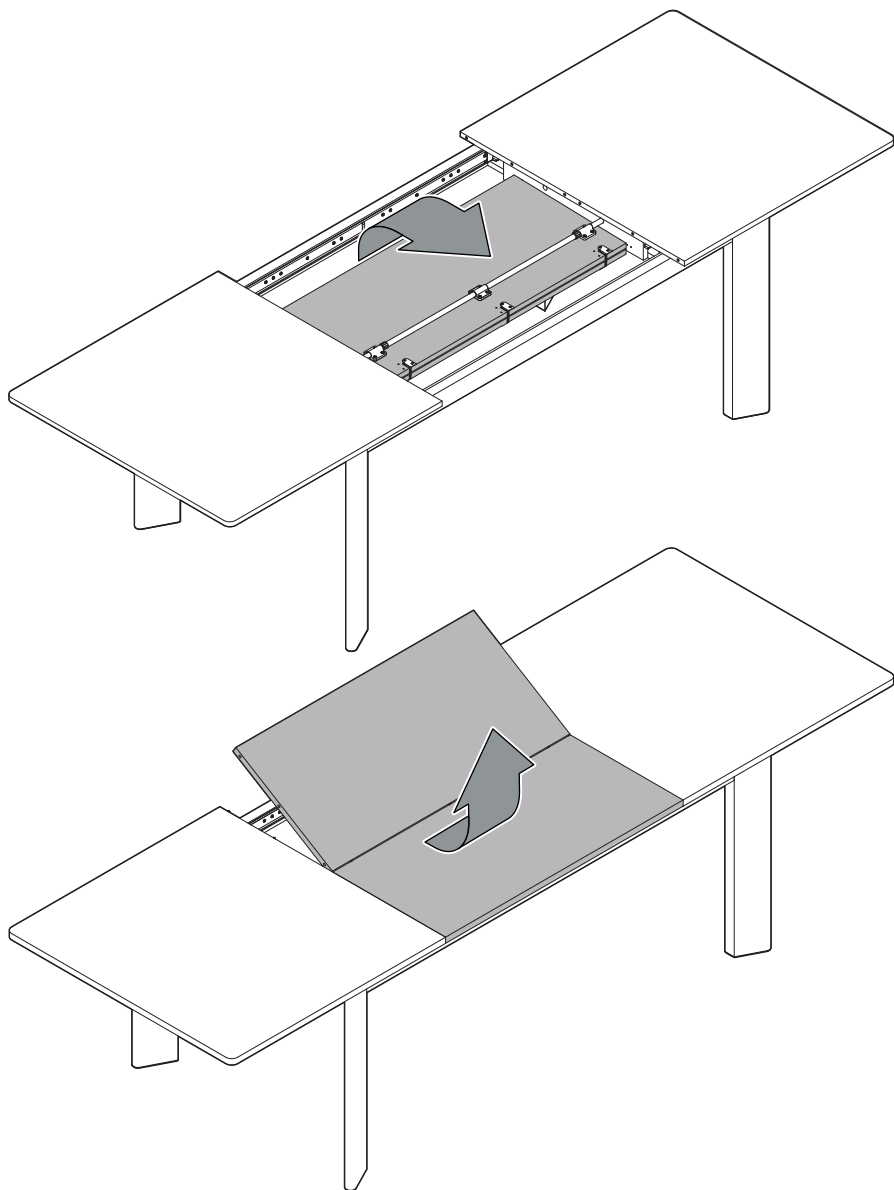


10.

Once the extension plates are open, slide the two tabletop parts into place. To finish, ensure that there are no gaps between the leaves and the two tabletops. Pull the two levers down on either side to lock the parts together.

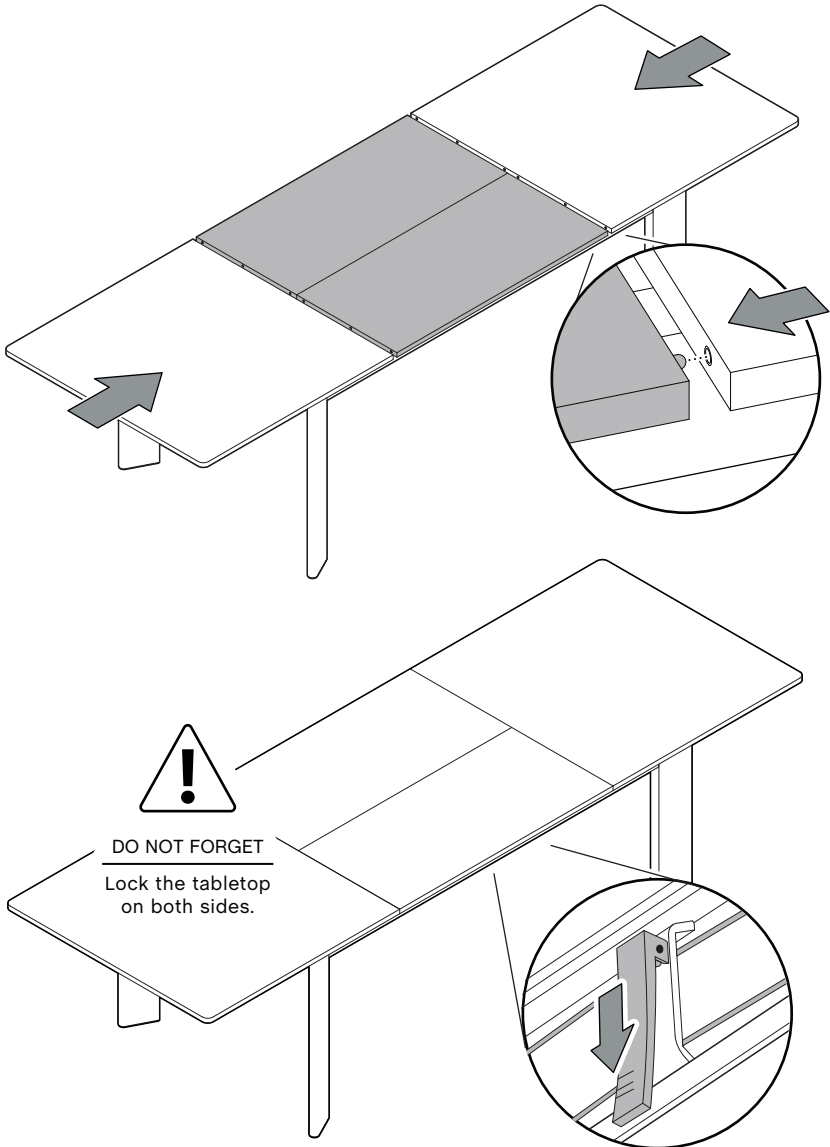



## CLOSING THE EXTENSION LEAVES

To close the table, open both locks and slide the tabletop parts outwards.

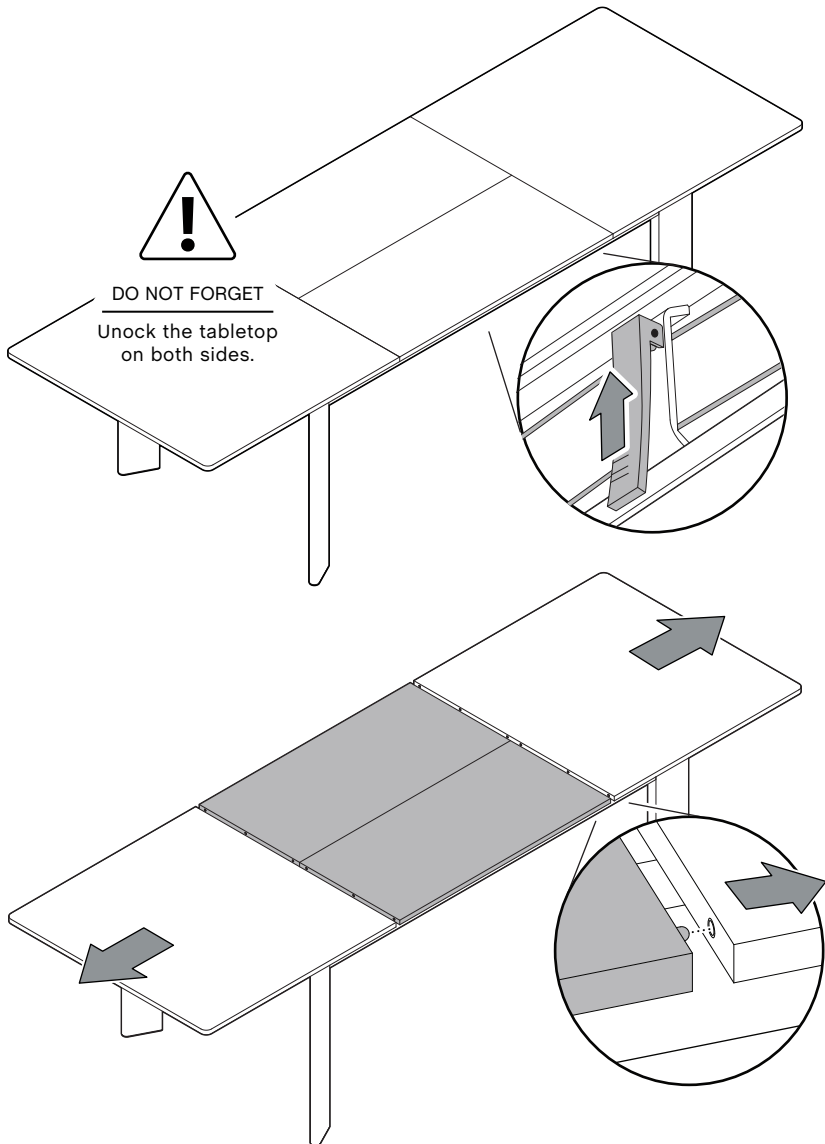


12.

Flip the two leaves to close them.

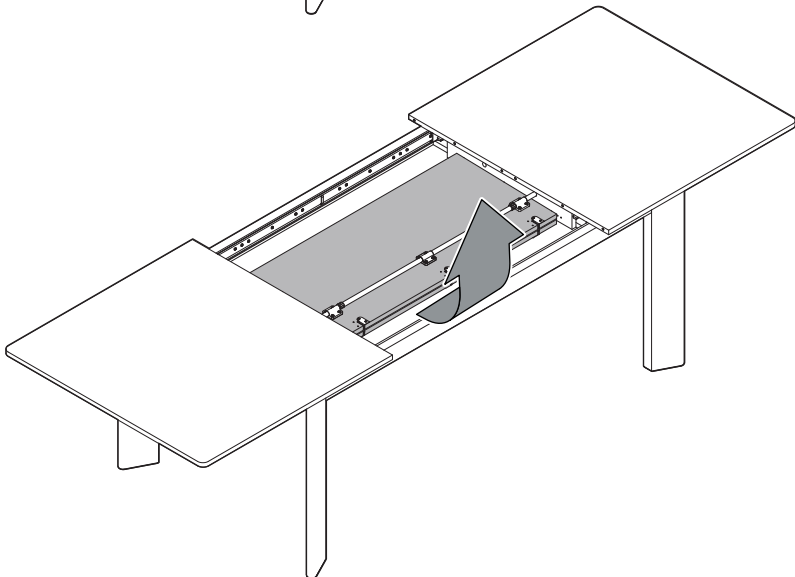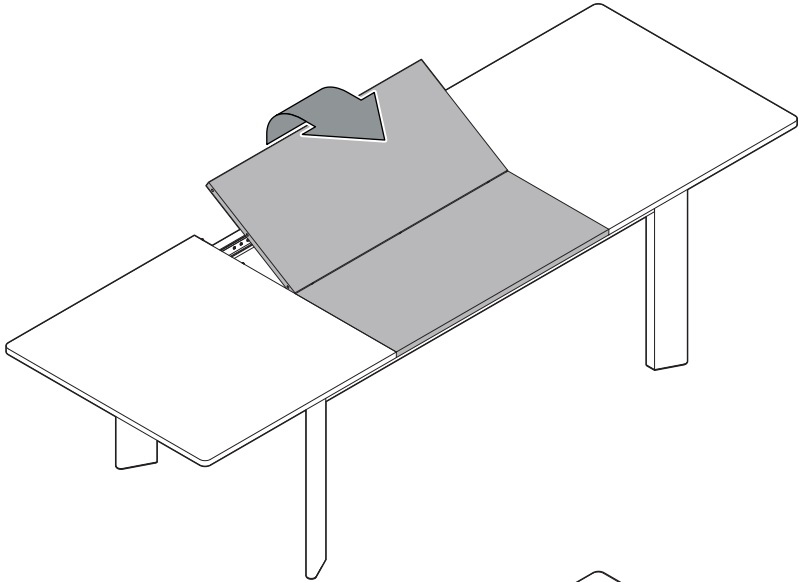

13.

Push the two tabletop parts together. If the movement feels forced, make sure the lock is fully open. You should hear a click when it is open.

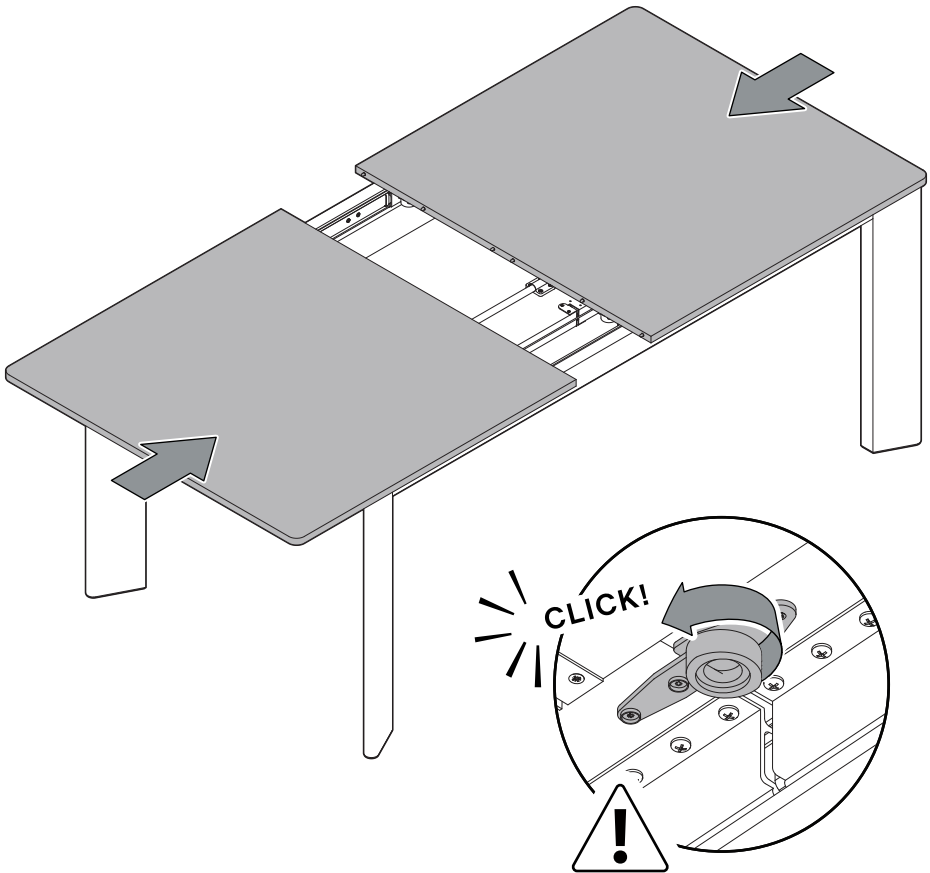

**ATTENTION**

Make sure the lock is fully open.

– CARE & MAINTENANCE –

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your furniture.



Please find our Care & Maintenance guide by scanning the QR code



You can find more relevant information on Chisel Collection by scanning the QR code

You can also find the same information here  
[hay.dk/downloads](https://hay.dk/downloads)

Havnen 3 8700 Horsens Denmark  
+45 3164 6000 / hay@hay.com

30/03/2026

**HAY**

