


FACTOR LINEAR SUSPENSION LAMP

LED driver wiring diagram


The Factor Linear Suspension Lamp is supplied with a dimmable LED driver, which is compatible with both PushDim (analogue) and DALI (digital) dimming controls. If you do not wish to use the dimming function, the LED driver can be used with a standard ON/OFF switch. Below are illustrations showing how to wire the LED driver with your chosen controller.

Ensure that the power supply to the circuit has been turned OFF before installing the product. In some countries, electrical installation must be carried out by authorised electricians/contractors; please check with your local authority for guidance.


ON/OFF

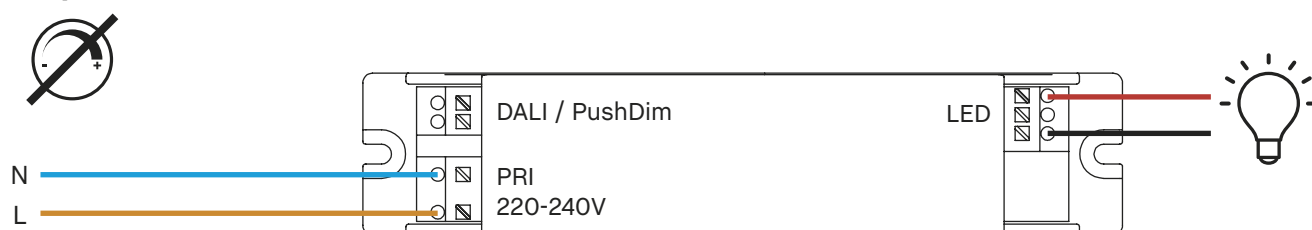

PushDim

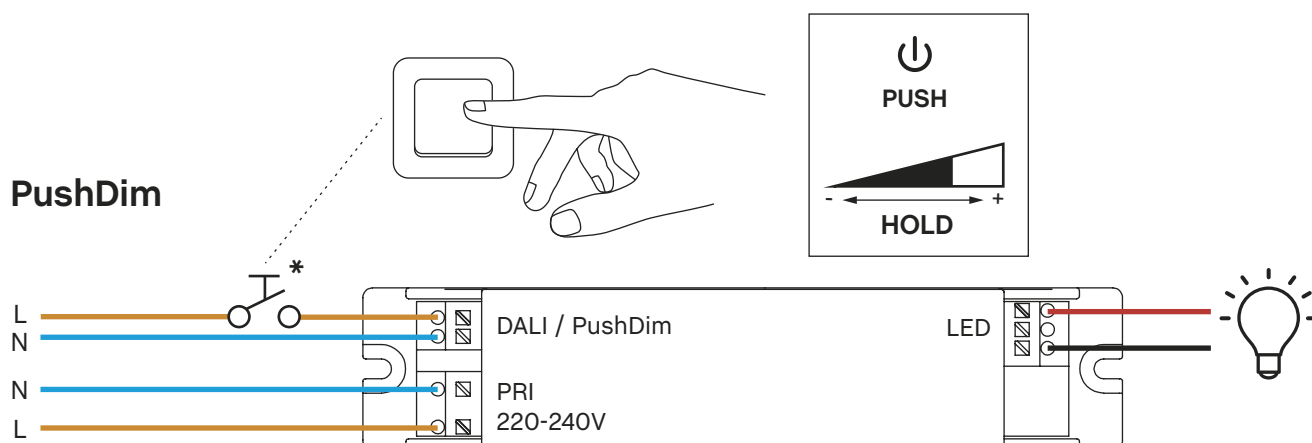

* EN: PUSH-TO-MAKE SWITCH / SPRING LOADED SWITCH
DK: AFBRYDER MED TRYKKONTAKT / KIPTRYK

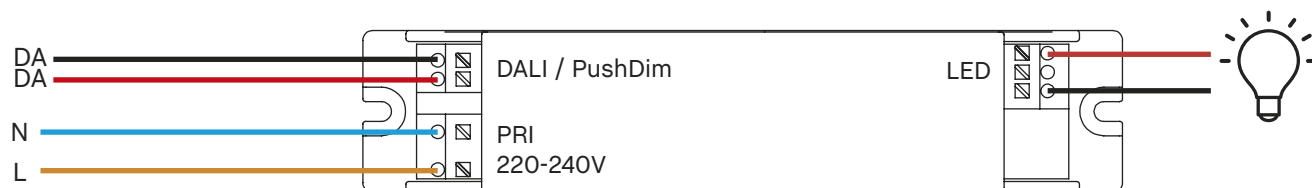

HAY