


Instructions

Alima NDS5 Note Design Studio 2026






Please read these instructions carefully and retain them for future reference to ensure the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damage caused by not following these instructions correctly. Do not modify this product in any way. If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com

&Tradition®

Alima NDS5

Note Design Studio

2026

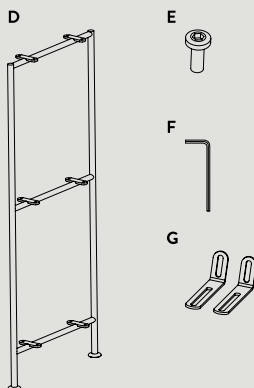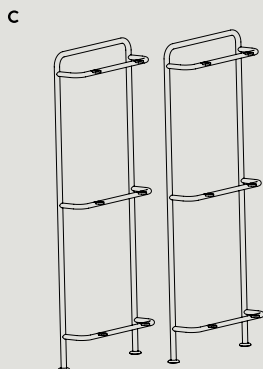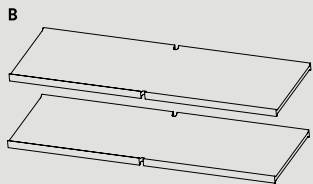

Safety precautions

WARNING! Furniture tipping over can lead to serious or fatal crushing injuries. The product must be mounted to the wall using the mounts provided.

- Dispose of plastic bag from packaging and do not allow children to play with it.
- Screws and plugs are not included to attach the wall mounts to the wall. Use suitable screws and plugs for your walls. Consult professional advice if in doubt.
- Do not put a TV on this product.
- Place heavier items on the lowest shelves.
- Maximum weight capacity 15 kg / 33 lbs per shelf.
- The shelving is only intended for indoor use.
- Handle with care in order not to scratch surfaces.
- Do not place the product in a humid environment.

Contents

- A** Top shelf
- B** Shelves x2
- C** End frames x2
- D** Middle frame
- E** Flat headed screws x24
- F** Allen Key
- G** Wall mounting brackets x2

Cleaning instructions

Lacquered wood

For daily care, it is recommended to dust the surface with a soft, dry cloth. Regular cleaning can be done using a soft cloth wrung in lukewarm water. Dry immediately afterwards with a soft, dry cloth following the wood grain.


Avoid abrasive cleaning detergents and aggressive cleaning agents as they may damage the surface of the wood. To prolong the look and lifespan of lacquered wood, avoid placing in direct sunlight, excessive heat or humidity.

Chromed metal

It is recommended only to use a soft dry cloth to clean chromed surfaces but in case more severe cleaning is necessary, a soft cloth wrung in lukewarm water can be carefully applied. Always dry immediately after cleaning with a soft dry cloth. Avoid using abrasive cleaning agents as this may permanently damage the surface.


Step 1 / 16

Place the top shelf (A) on a soft surface with the holes facing up and attach the middle frame (D) to the middle of the top shelf using 4 screws (E). Do not fully tighten the screws yet.

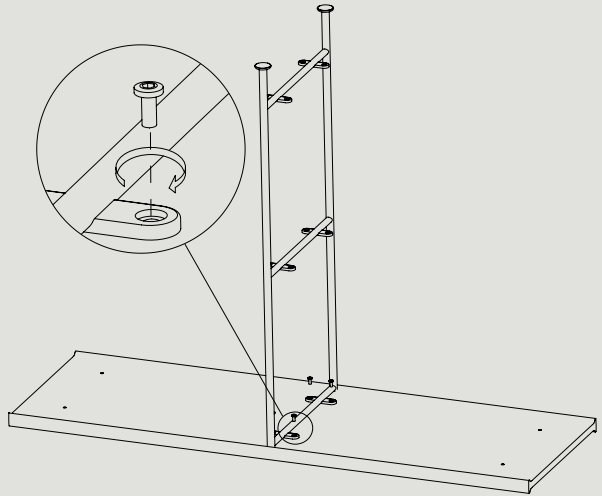


Step 2 / 16

Lay the frame and the top shelf carefully on its side on a soft surface.

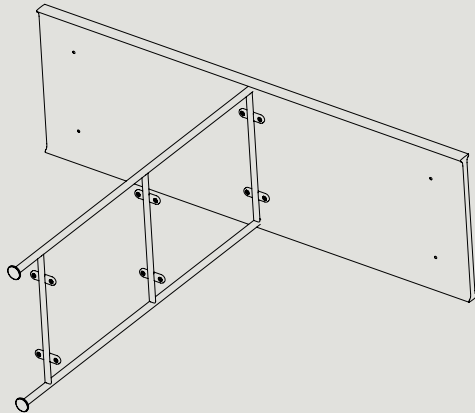


Step 3 / 16

Carefully, insert one of the shelves (C) at an angle and slide it between the middle frame.

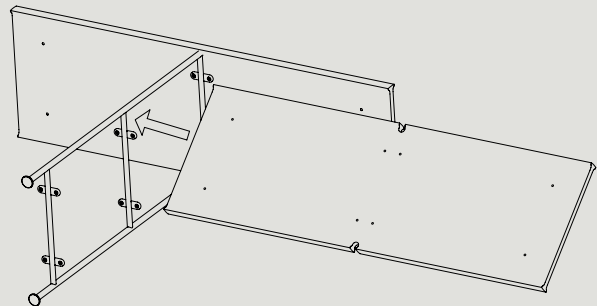

Step 4 / 16

Attach the shelf to the middle frame using 4 screws. Do not fully tighten the screws yet.

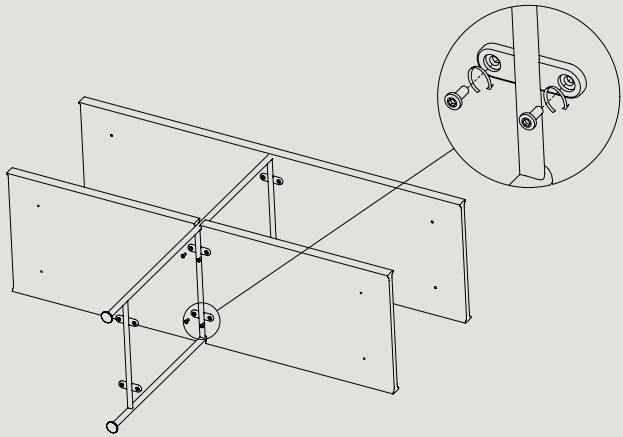


Step 5 / 16

Repeat steps 3-4 for the bottom shelf.

Step 6 / 16


Carefully align the holes of one frame (C) to be in line with the holes in the shelves as illustrated.

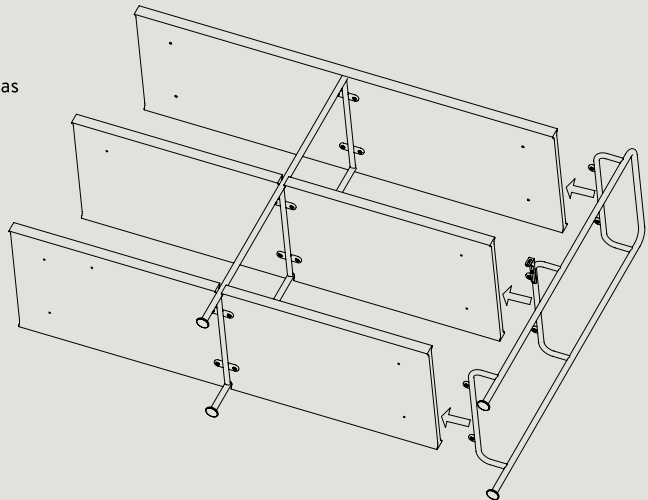

Step 7 / 16

Attach the two shelves and the top shelf to the end frame using 6 screws (E).

Do not fully tighten the screws yet.

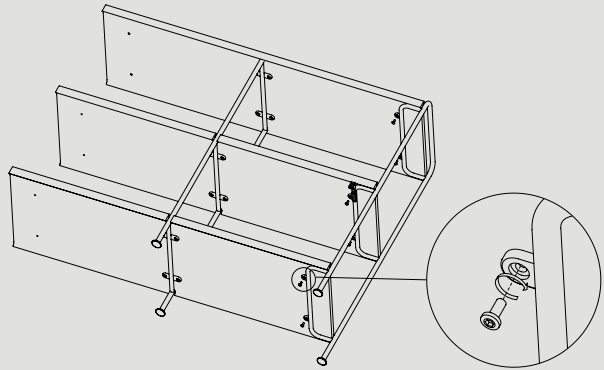


Step 8 / 16

Repeat steps 6-7 for the other side.



Step 9 / 16

Fully tighten all screws and carefully place the shelving in an upright position.

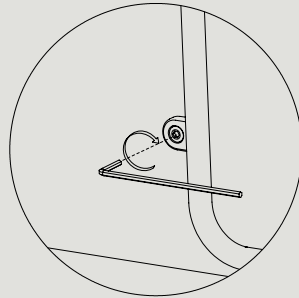


Step 10 / 16

Make sure the shelving is levelled. If not, adjust the gliders as needed.

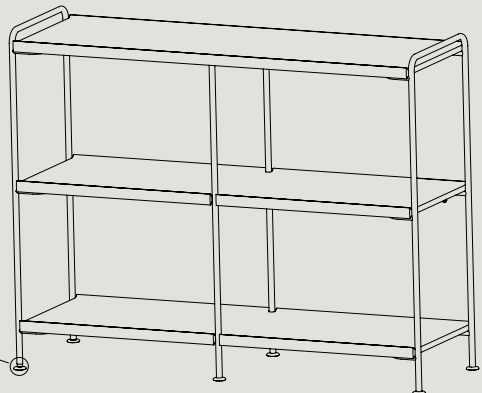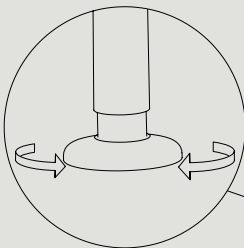


Step 11 / 16

Loosen the screws for the wall mounting brackets (G).

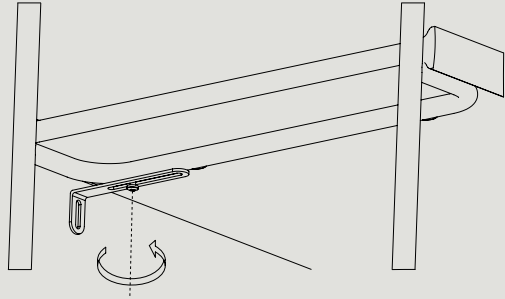


Step 12 / 16

Place the shelving next to the intended wall and push the wall mounting brackets to be flush with the wall.

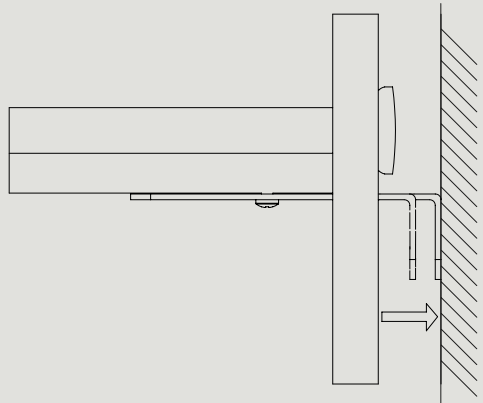

Step 13 / 16


Mark the holes with a pencil on the wall.

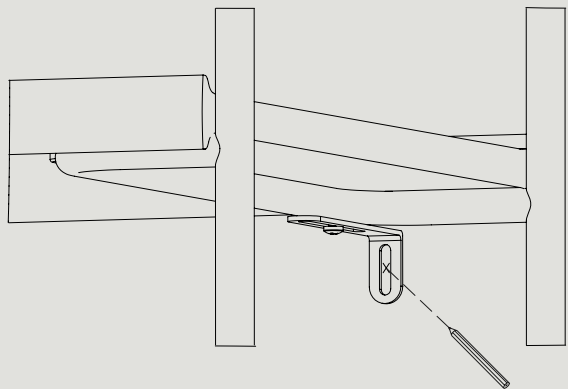

Step 14 / 16



Drill the holes for plugs that are suitable for the type of wall.

IMPORTANT: Make sure that you use plugs suitable for your wall type. If in doubt, consult a professional to ensure the product is securely attached to the wall.

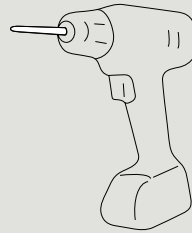

Step 15 / 16

Place the shelving next to the wall and secure it in place using a pan head screw.

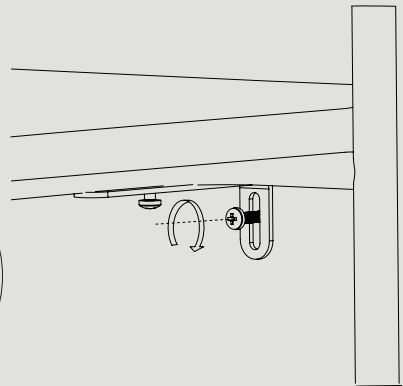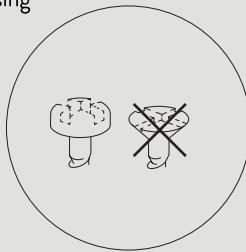

Step 16 / 16

Tighten the screw on the frame to fully fasten the wall mounting bracket.

