


- INSTRUCTION MANUAL -

# WOODY

LOW, COLUMN LOW, HIGH, COLUMN HIGH

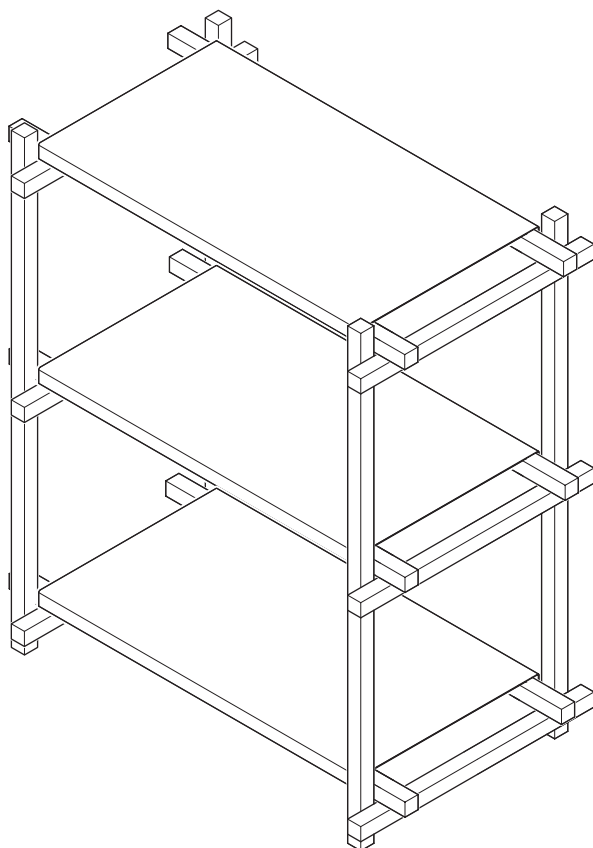


DESIGN BY HAY

# HAY




- PARTS -

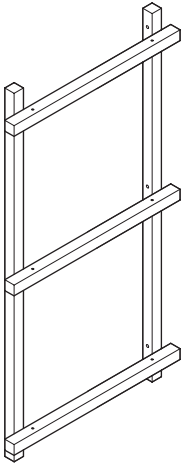


**A** Uprights




**B** Dowels




**C** Screws

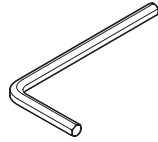


**D** Allen key

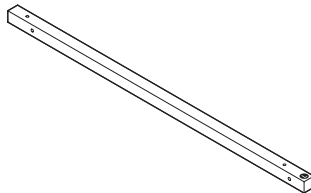

**L** Crossbars left

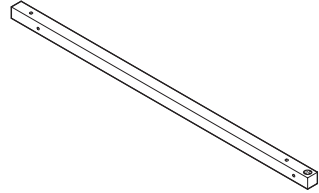


**R** Crossbars right

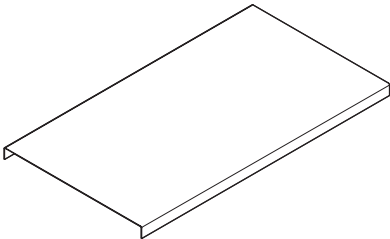


**E** Steel shelves

OR

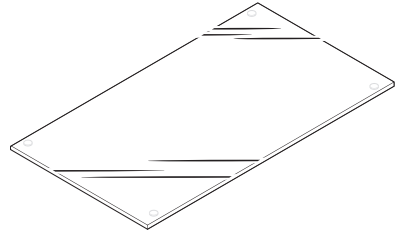

**F** Glass shelves

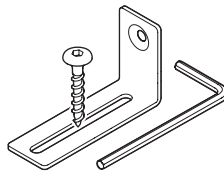

**G** Safety bracket



This manual shows the Woody Column Low.  
The same assembly procedure applies to all versions.

We recommend that two people carry out the assembly together.

- WARNING -





Maximum weight when properly installed.  
The load has to be evenly distributed.  
Applies to all sizes.

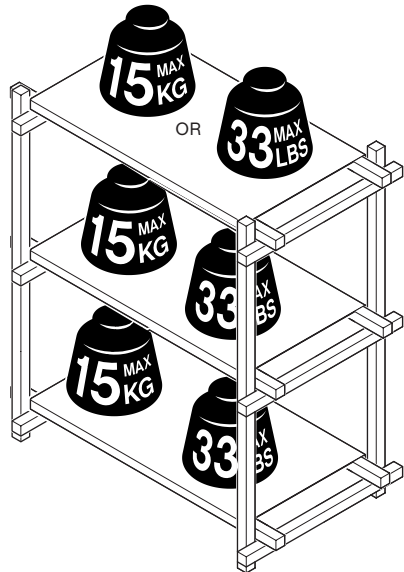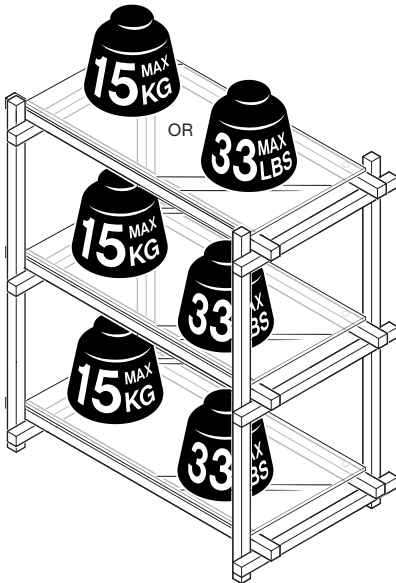


- WARNING -

Protect the product from scratches and other damage while assembling  
by using the packaging material as an underlay.

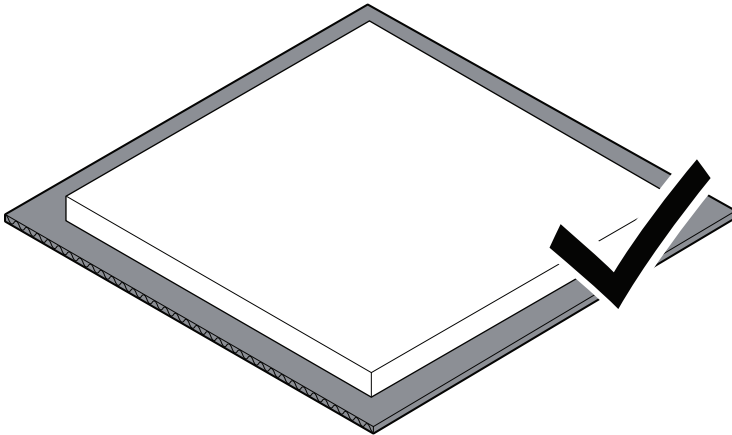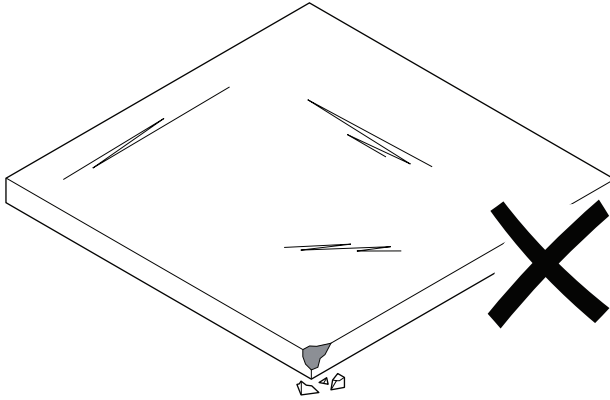



1.

Insert the dowels **B** in the crossbars left **L**.

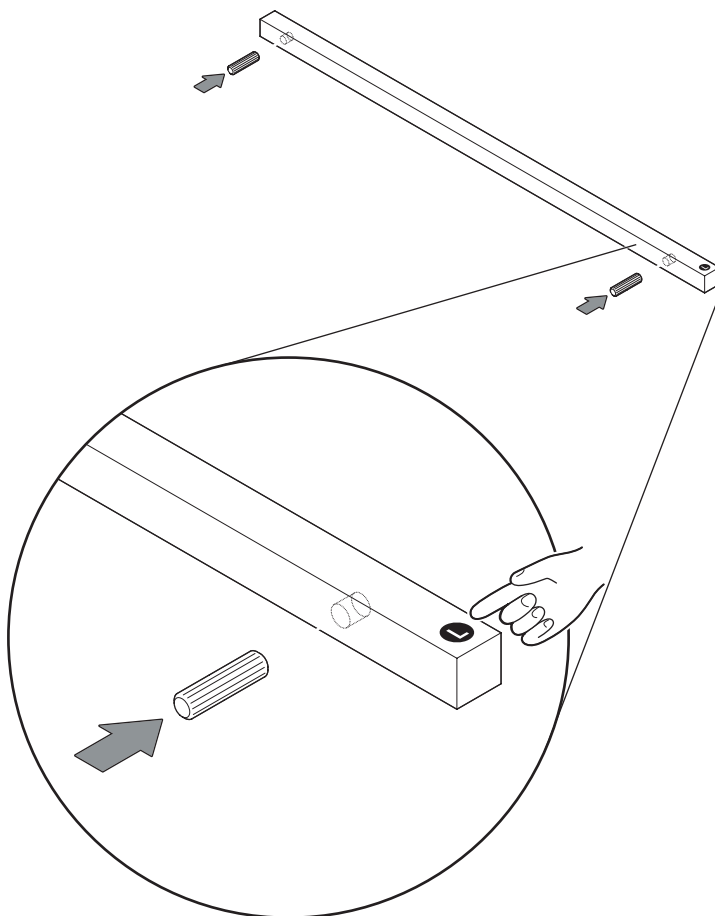


2.

Place the uprights **A** aligned as illustrated.

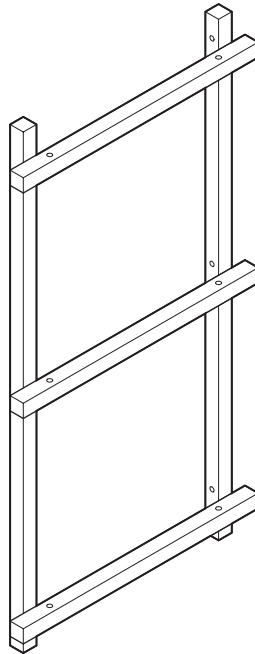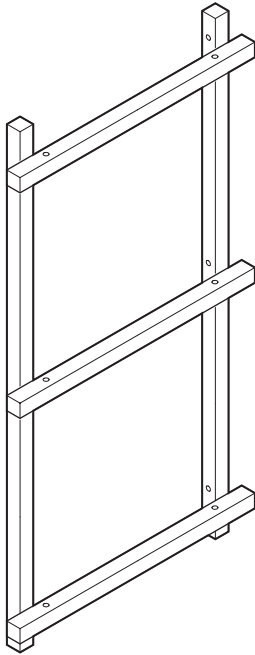

3.


Mount the crossbars left **L** in the uprights **A**.

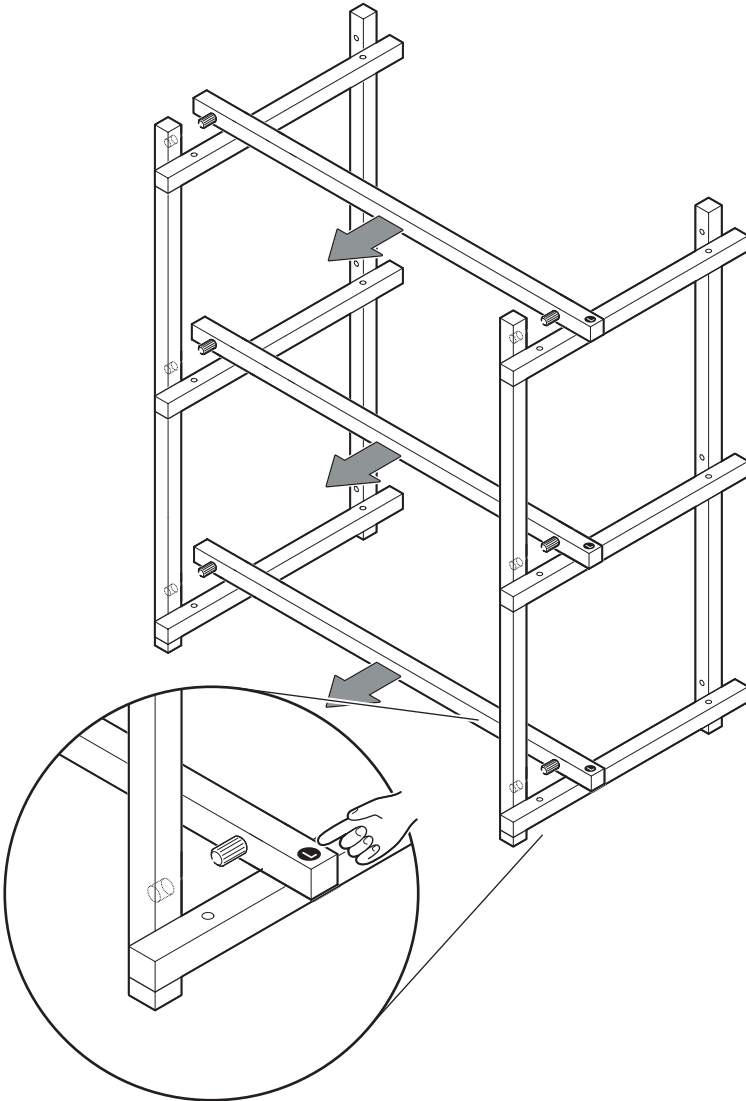




4.

Mount the screws **C** with the Allen key **D**. Do not fully tighten the screws.

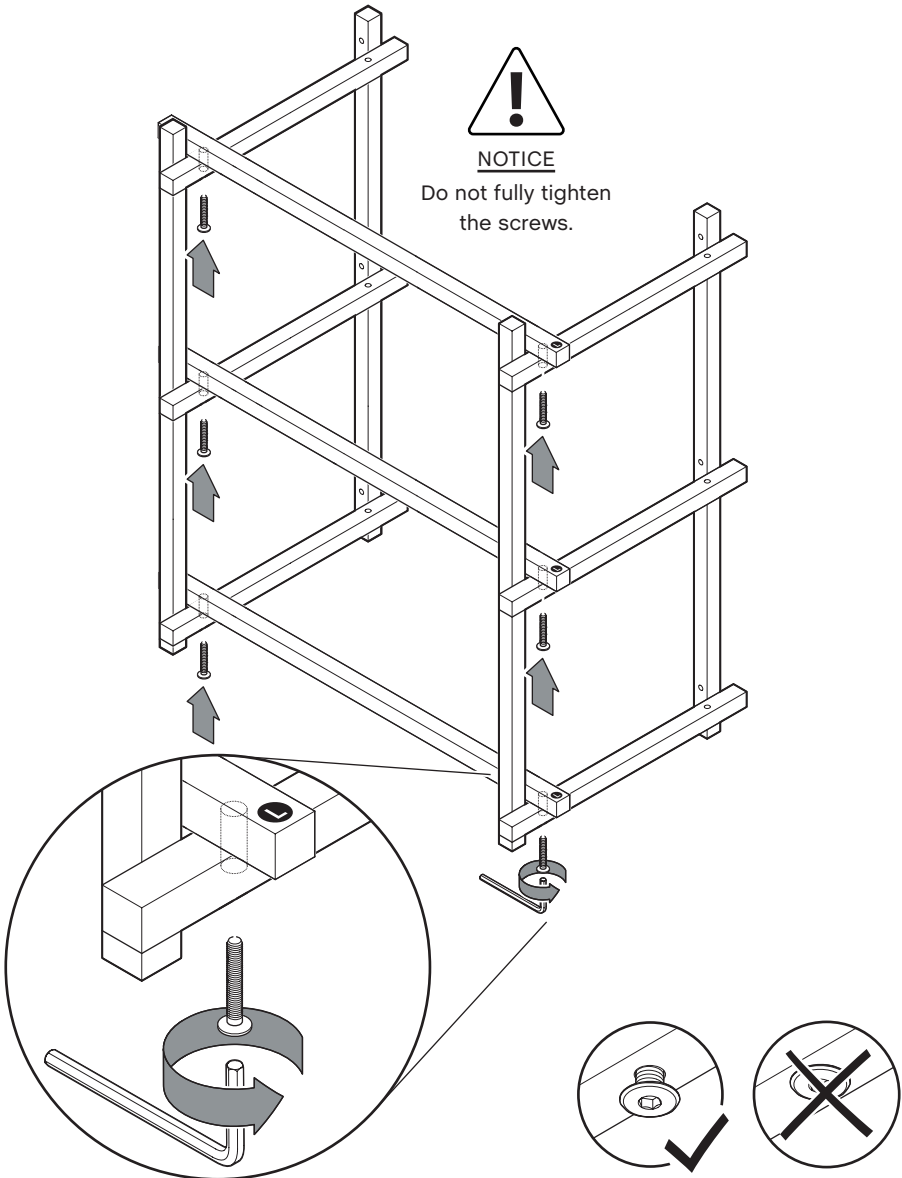


5.

Insert the dowels **B** into the crossbars right **R**.

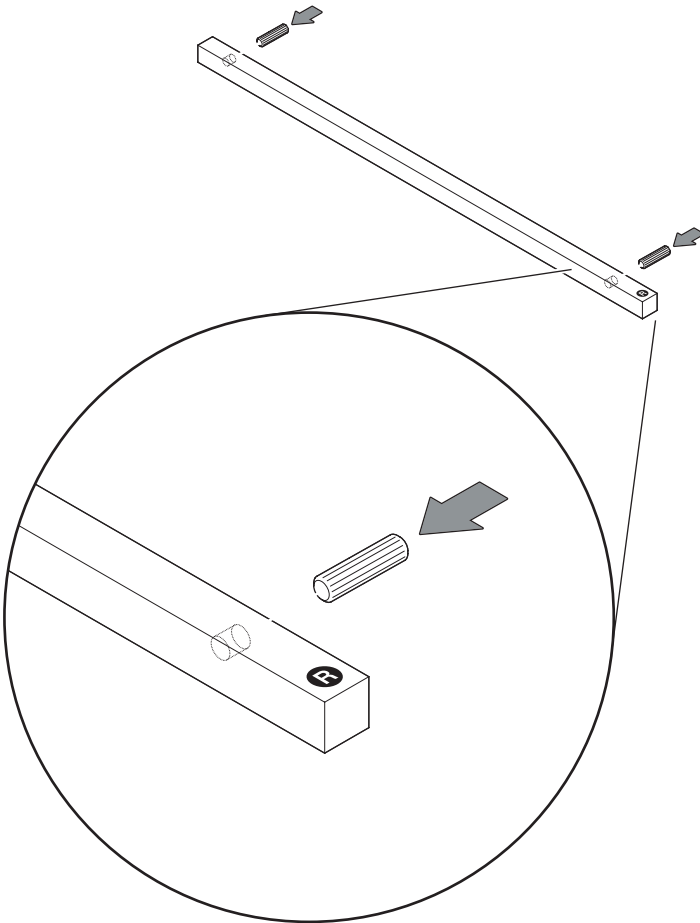

6.

Mount the crossbars left **R** onto the uprights **A**.

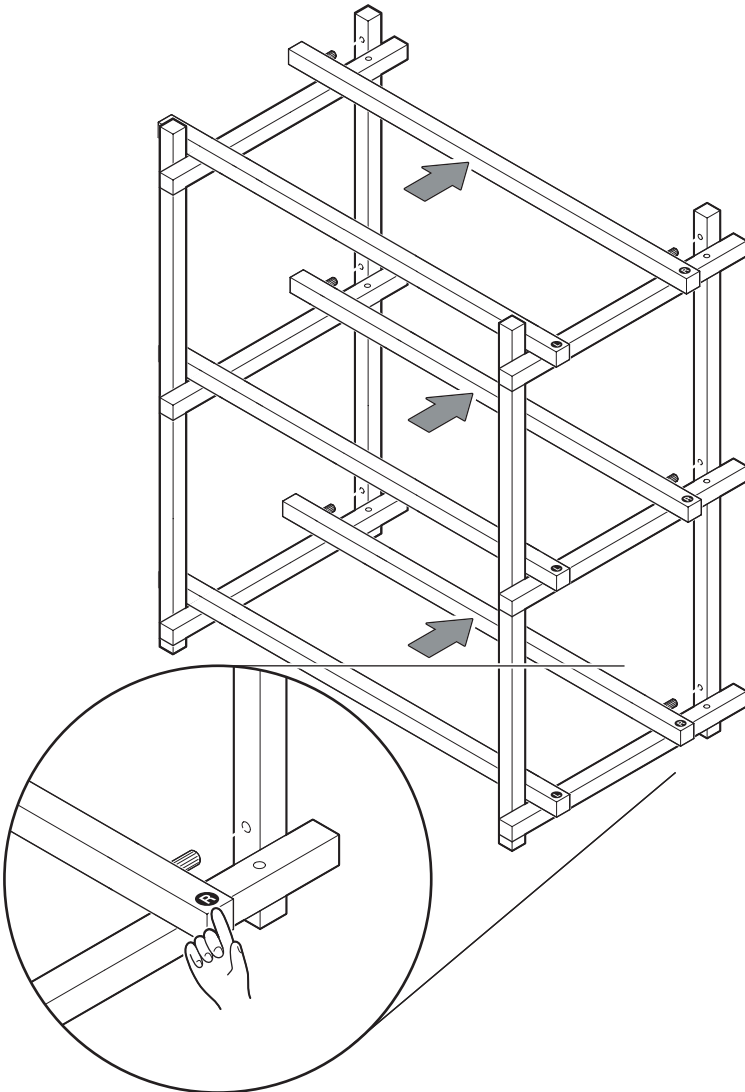




7.


Insert the screws **C** with the Allen key **D**. Do not fully tighten the screws.






**NOTICE**

Do not fully tighten  
the screws.

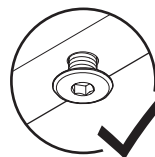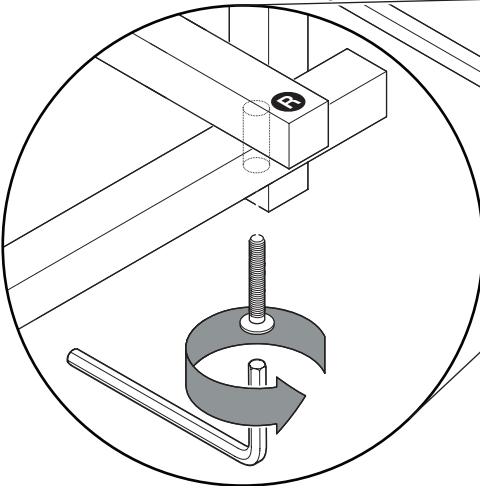
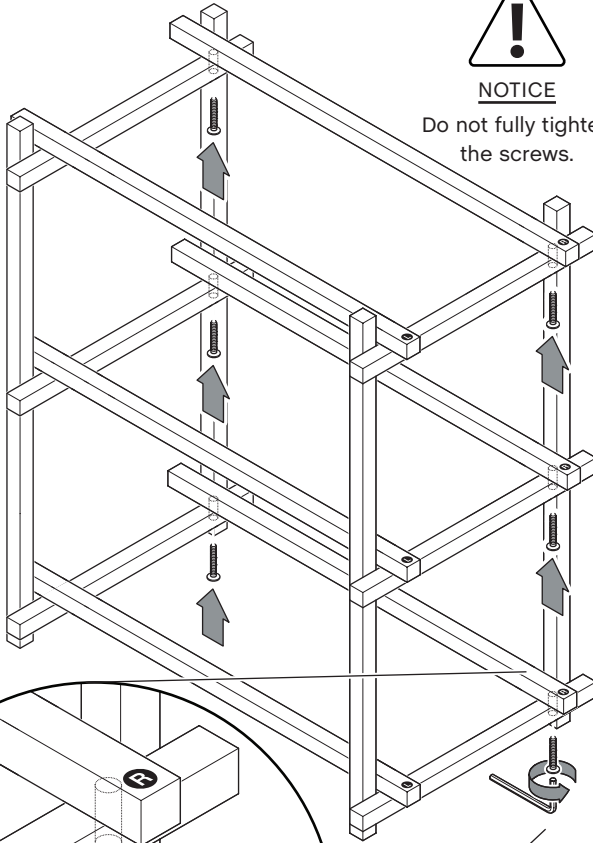


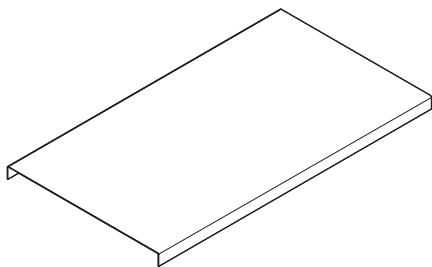

**E** Steel shelves

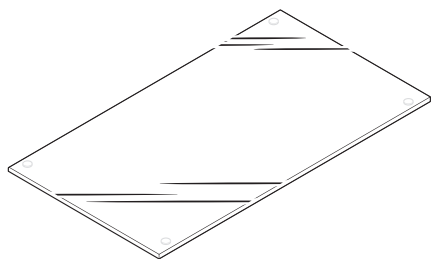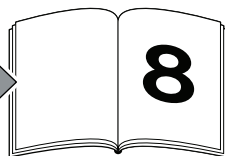


**F** Glass shelves

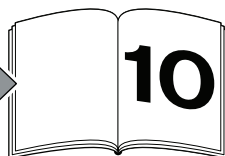


8.

Fully tighten all the screws.

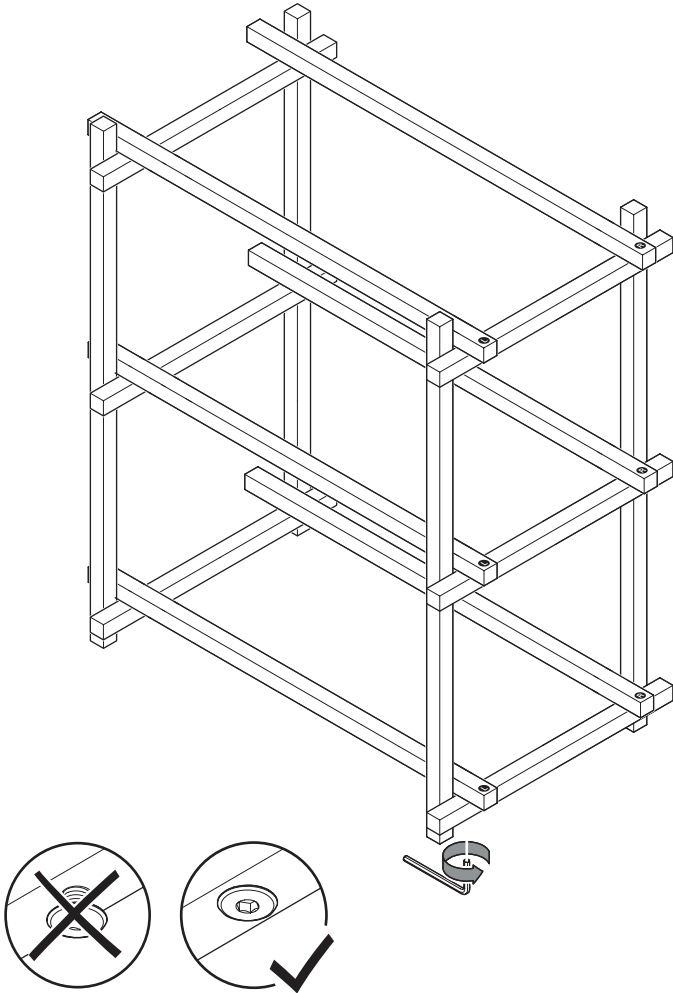


9.

Place the steel shelves **E** on the frame.

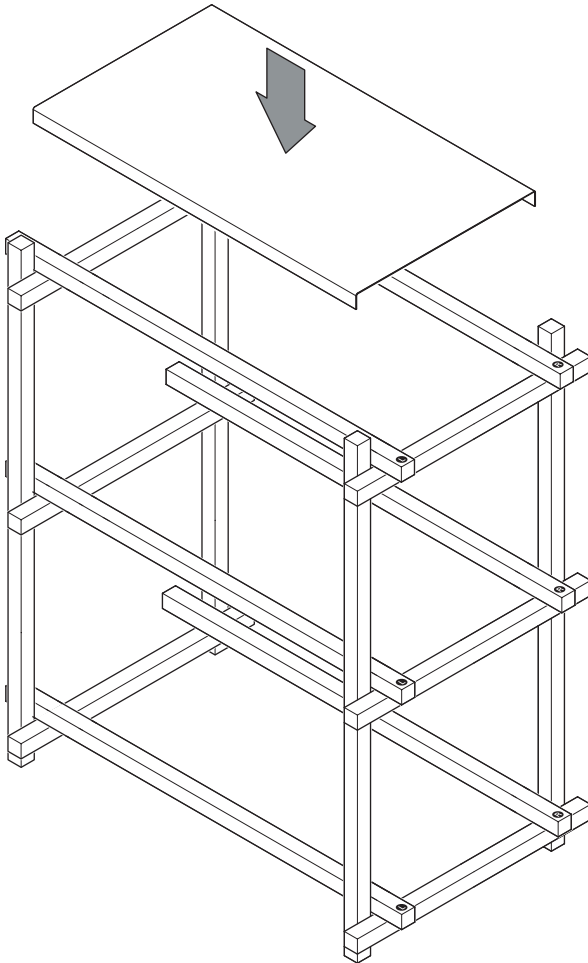

10.


Remove the foil from all bumpers on the glass shelves **F**.

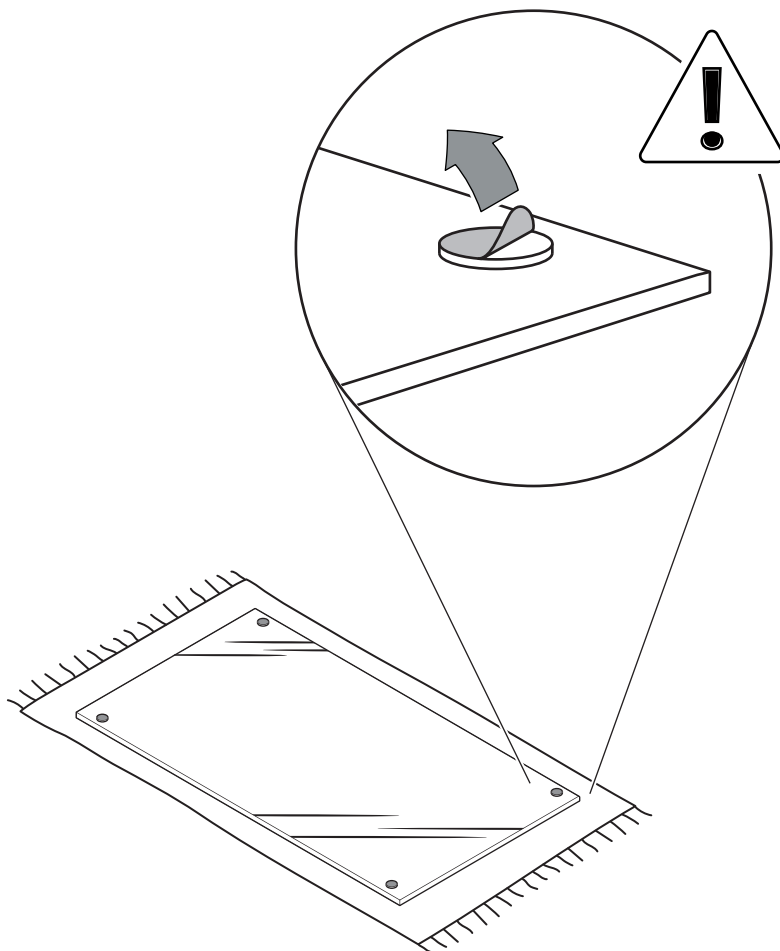




11.

Place the glass shelves **F** on the frame.

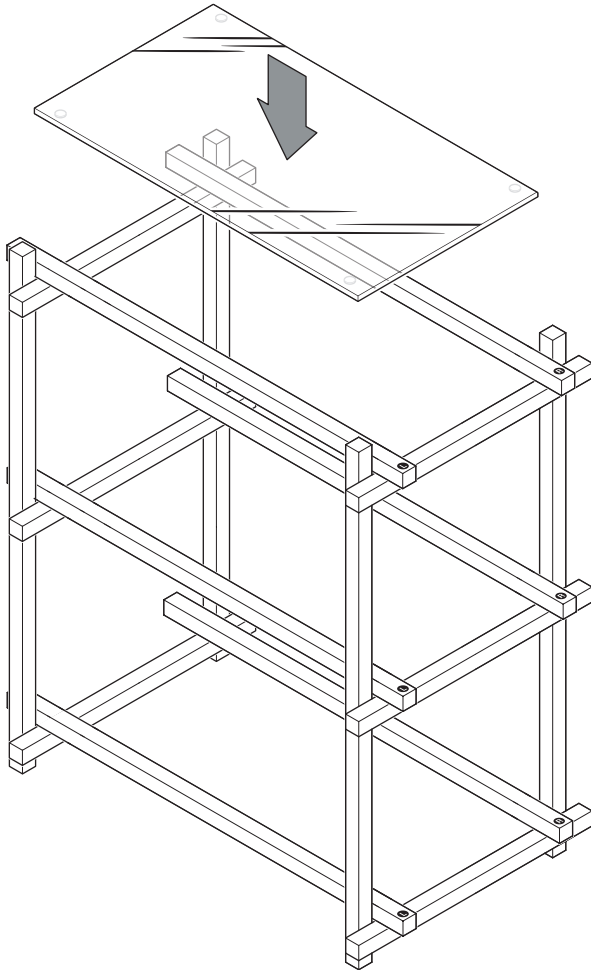

12.


Fully tighten all the screws.

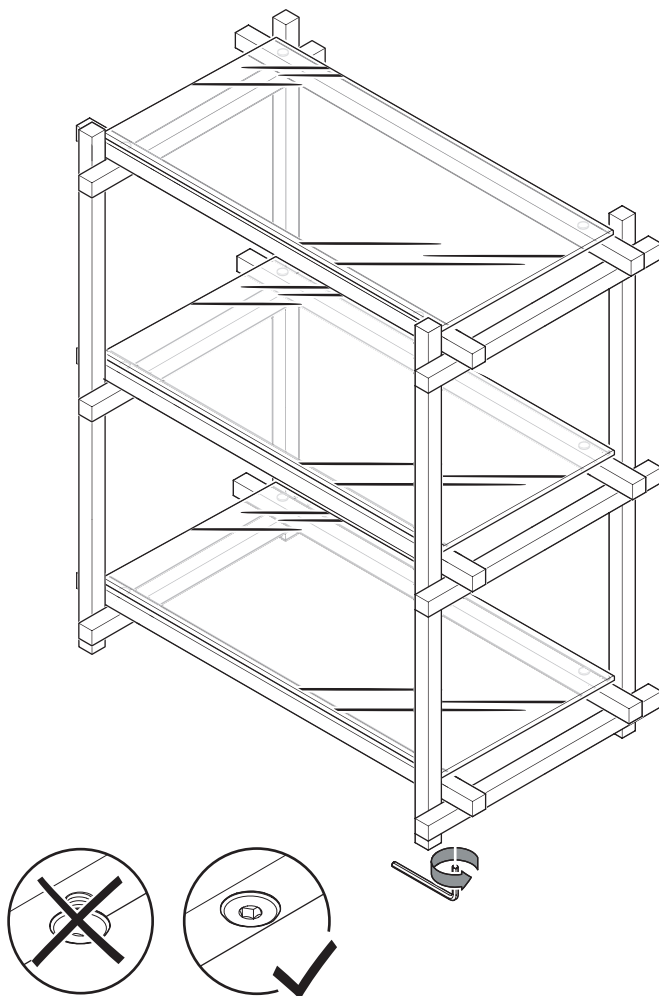

13.

High shelves needs to be fastened to the wall.


Mount the safety bracket **G** onto the frame by inserting the screw in the predrilled hole.

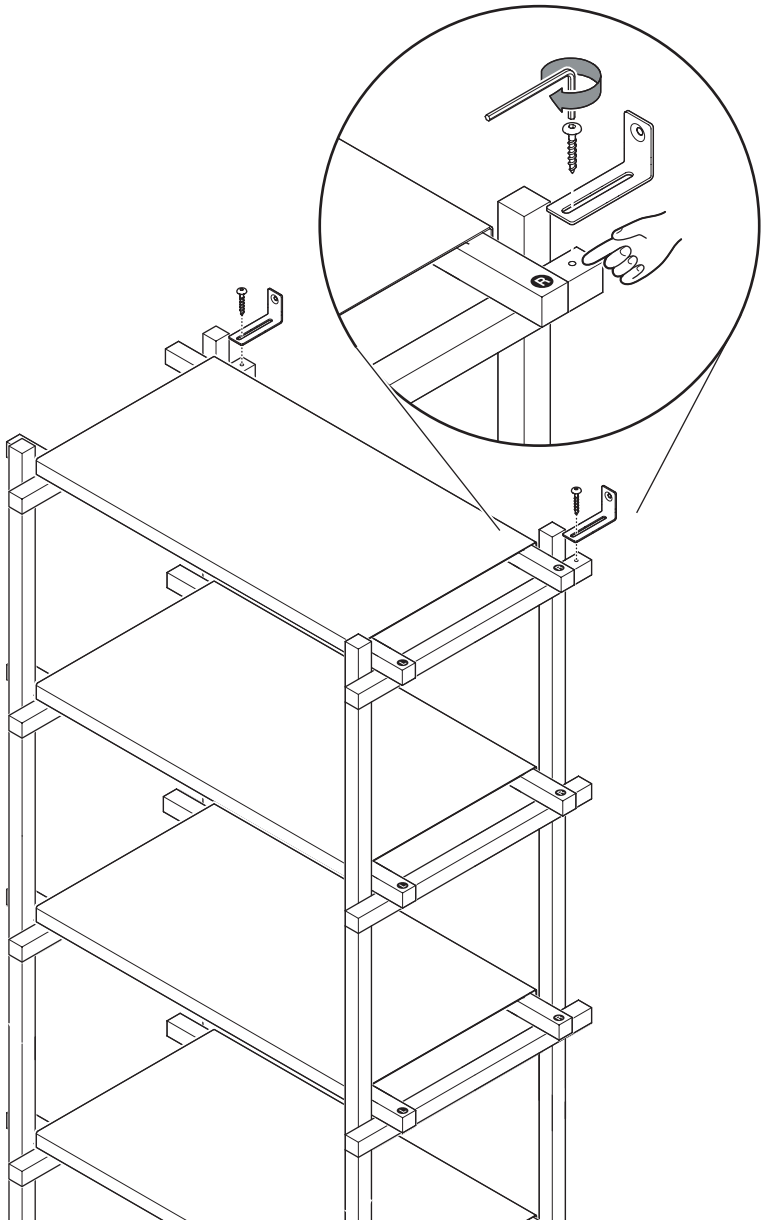

14.


Secure the safety bracket to the wall with the screws.

Different walls require different types of hardware fasteners, which are not provided by HAY. Consult a professional if in doubt about what kind of hardware to use for your wall.

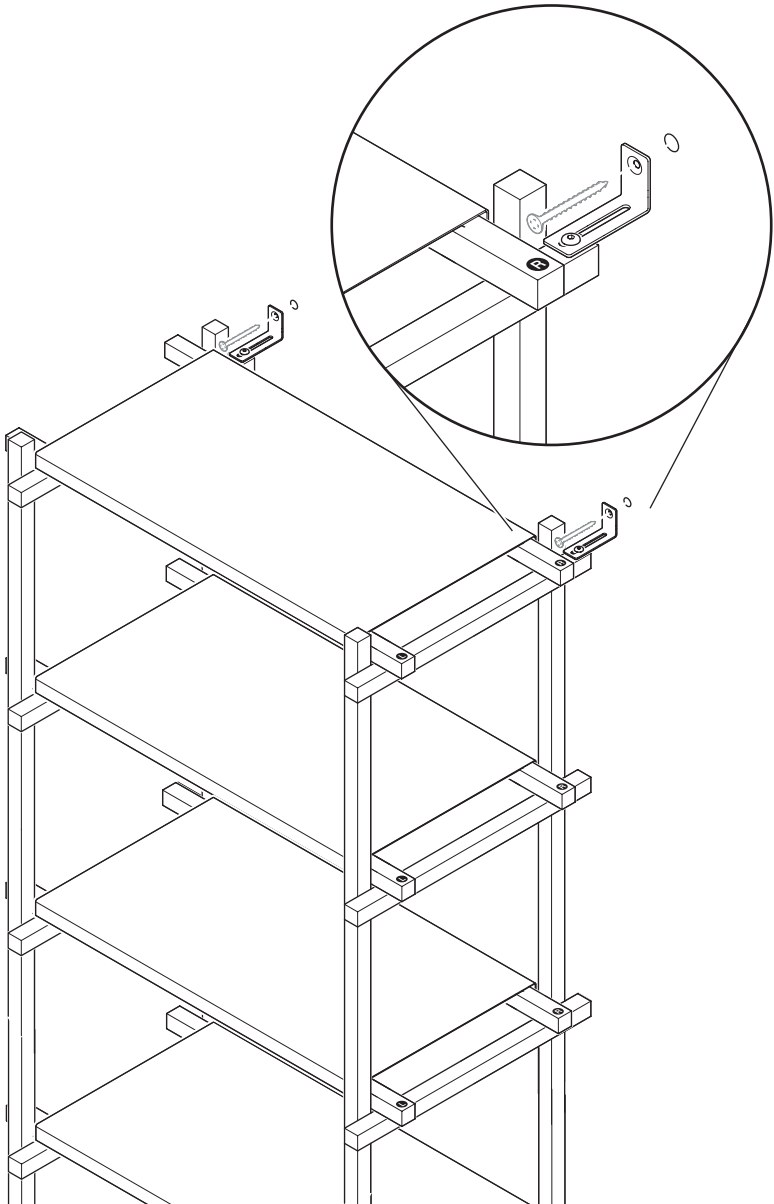

15.

Ready to use.

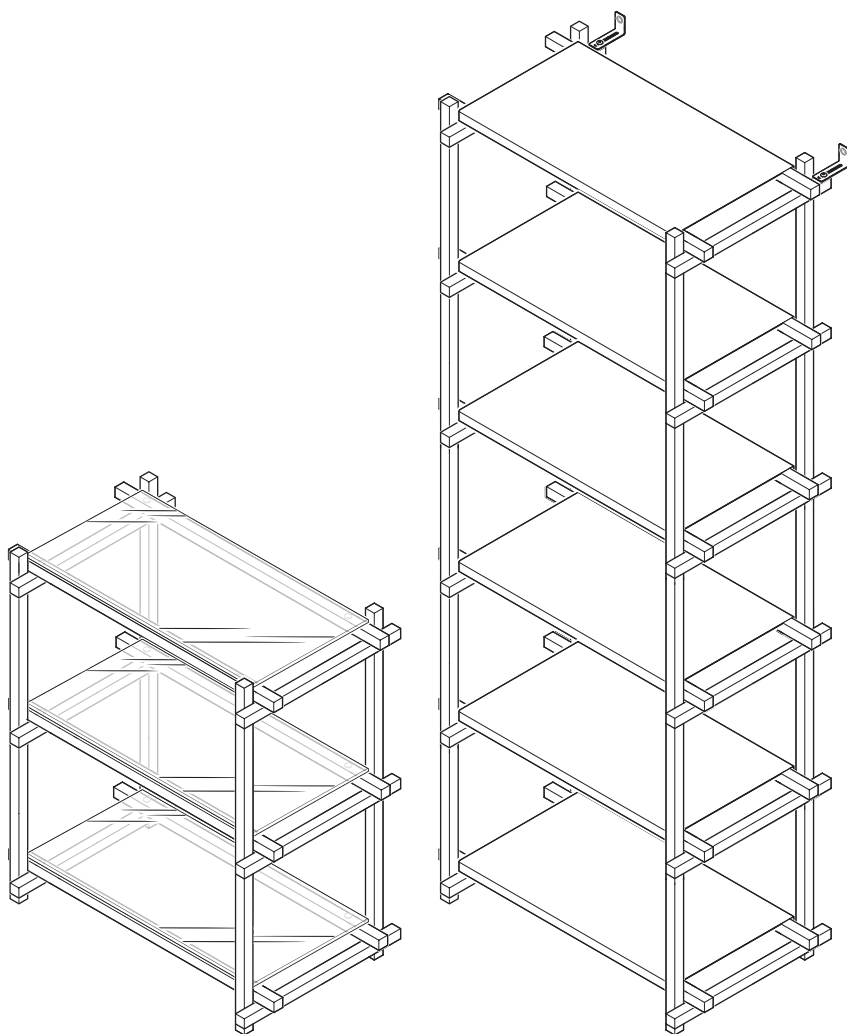



- CARE & MAINTENANCE -

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your furniture.



Please find our Care & Maintenance guide by scanning the QR code



You can find more relevant information on Woody by scanning the QR code

You can also find the same information here  
[hay.dk/downloads](https://hay.dk/downloads)





Havnen 3 8700 Horsens Denmark  
+45 3164 6000 / hay@hay.com

02/10/2025

**HAY**

